



<b>IMPORTANT FOR FUTURE REFERENCE</b> Please complete this information and retain this manual for the life of the equipment:
Model #: _____
Serial #: _____
Date Purchased: _____

## Installation & Operation Manual

# Electric Cabinet Base Convection Steamer ECX-2-24, ECX-2-36, ECX-10-24 & ECX-10-36



Model ECX-10-24

### **WARNING**

Improper installation, adjustment, alteration, service or maintenance can cause property damage, injury or death. Read the installation, operating and maintenance instructions thoroughly before installing or servicing this equipment.

### **CROWN FOOD SERVICE EQUIPMENT**

 A Middleby Company

70 Oakdale Road, Downsview (Toronto) Ontario, Canada, M3N 1V9

Telephone: 919-762-1000




[www.crownsteamgroup.com](http://www.crownsteamgroup.com)



## SAFETY PRECAUTIONS

Before installing and operating this equipment, be sure everyone involved in its operation is fully trained and aware of precautions. Accidents and problems can be caused by failure to follow fundamental rules and precautions.

The following symbols, found throughout this manual, alert you to potentially dangerous conditions to the operator, service personnel, or to the equipment.

 <b>DANGER</b>	This symbol warns of immediate hazards that will result in severe injury or death.
 <b>WARNING</b>	This symbol refers to a potential hazard or unsafe practice that could result in injury or death.
 <b>CAUTION</b>	This symbol refers to a potential hazard or unsafe practice that could result in injury, product damage, or property damage.
<b>NOTICE</b>	This symbol refers to information that needs special attention or must be fully understood, even though not dangerous.

## IMPORTANT NOTES FOR INSTALLATION AND OPERATION

### **WARNING**

This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.

### **WARNING**

Improper installation, operation, adjustment, alteration, service or maintenance can cause property damage, injury or death. Read the installation, operating and maintenance instructions thoroughly before installing, operating or servicing this equipment.

### **CAUTION**

Operating, testing, and servicing should only be performed by qualified personnel.

### **NOTICE**

Contact the factory, the factory representative or local service company to perform maintenance and repairs.

### **NOTICE**

This product is intended for commercial use only. NOT FOR HOUSEHOLD USE.

### **NOTICE**

This manual should be retained for future reference.


It is recommended that this manual be read thoroughly and that all instructions be followed carefully.

RETAIN THIS MANUAL FOR FUTURE REFERENCE.

## Table of Contents

Important Notes For Installation and Operation .....	2
Service Connections .....	4
Introduction .....	5
Installation .....	5
Operation .....	7
Periodic Maintenance .....	10
Cleaning .....	12
Troubleshooting .....	13
Cooking Chart .....	14

# SERVICE CONNECTIONS

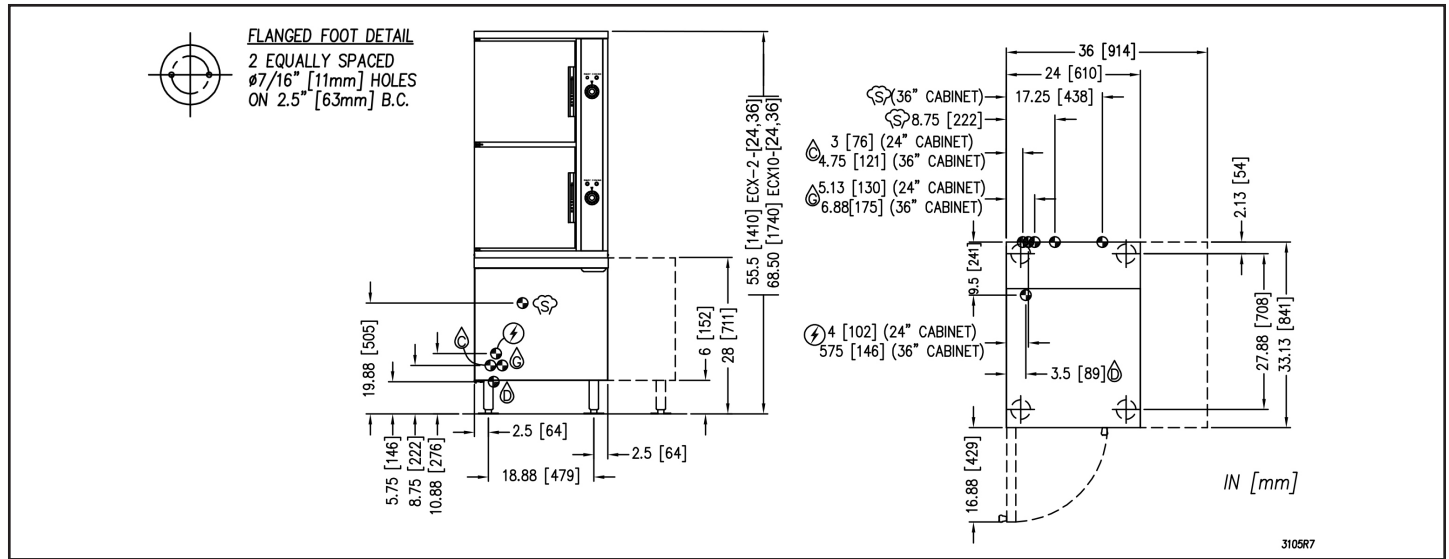

## SERVICE CONNECTIONS

- ⚡ – ELECTRICAL CONNECTION: Field wiring electrical connection to be as specified on data plate.
- Ⓜ – BOILER FEED WATER: 1/2" (13 mm) NPT at 25-50 PSI (170-345 kPa).
- Ⓞ – CONDENSATE COLD WATER: 1/2" (13 mm) NPT at 25-50 PSI (170-345 kPa) (OPTIONAL)
- Ⓢ – STEAM TAKE-OFF CONNECTION: 3/4" (19 mm) IPS optional to operate adjacent equipment.
- Ⓧ – DRAIN: 2" (51 mm) IPS piped to open floor drain. No solid connection.

## ELECTRICAL CHARACTERISTICS

AVAILABLE kW		
MODEL	STANDARD	OPTIONAL
ECX-2-[24,36]	24	36, 42, 48
ECX-10-[24,36]	36	42, 48

		AMPS PER LINE						
kW	PHASE	208V	220V	240V	380V	415V	480V	
24	3	66.6	63.0	57.8	36.5	33.4	28.9	
36	3	99.9	94.5	86.6	54.7	50.1	43.3	
42	3	116.6	110.2	101.0	63.8	58.4	50.5	
48	3	N/A	N/A	115.5	72.9	66.8	57.7	

## COMPARTMENT PAN CAPACITY, WEIGHT AND CLEARANCE

MODEL	PAN DEPTH				SHIPPING WEIGHT		MINIMUM CLEARANCE	
	1"	2-1/2"	4"	6"	(24" CABINET)	(36" CABINET)		
ECX-2-[24,36]	6	3	2	1	550 lbs. [249 kg]	650 lbs. [255 kg]	SIDES	0
ECX-10-[24,36]	10	5	3	2	575 lbs. [260 kg]	700 lbs. [317 kg]	BACK	0

## WATER QUALITY STATEMENT

Water is the essential ingredient in steam equipment, water quality is the major factor affecting the performance of your appliance. Crown Steam Group offers a Comprehensive Water Treatment System which exceeds our minimum water requirements. Proof of installation and proper cartridges replacement is required for warranty coverage. Water supply to Crown Steam Group steamers must be within these guidelines.

Total dissolved solids.....Less than 60 PPM                      Chlorine .....Less than 1.5 PPM  
 Total alkalinity .....Less than 20 PPM                              pH Factor .....6.8 - 7.3  
 Silica.....Less than 13 PPM

Water which does not meet these standards should be treated with the installation of Middleby's Water Treatment System. Call 919-762-1000 if you have questions concerning your water meeting these parameters.

\*Failure or malfunction of this appliance due to poor water quality is not covered under warranty.  
**Reference [www.crownsteamgroup.com](http://www.crownsteamgroup.com) for complete warranty details and instructions.**

## DISCLAIMER

**Terry System Cartridge Changes / Installation** – "2-3 gallons of water MUST be purged at each cartridge change or new installation prior to water supply being fed to the steamer. Failure to do so can result in component damage within the steamer which is not covered under warranty. For additional guidance on proper installation, refer to install documentation provided with each Terry System and Replacement Cartridge Set."

As continued product improvement is a policy of Crown, specifications are subject to change without notice.

# INTRODUCTION

## DESCRIPTION

Models ECX-2 and ECX-10 convection steamers mounted on cabinet base electric boiler. ECX-2 steamer has a pan capacity of 6 (2-1/2") pans. ECX-10 steamer has a pan capacity of 10 (2-1/2") pans.

# INSTALLATION

## GENERAL

The steam boiler is designed to ASME Code and approved as a steam heating boiler restricted to operation at pressure not to exceed 15 psi.

## UNPACKING

### IMMEDIATELY INSPECT FOR SHIPPING DAMAGE

Immediately after unpacking, check for possible shipping damage. If the appliance is found to be damaged, save the packaging material and contact the carrier within 15 days of delivery.

We cannot assume responsibility for damage or loss incurred in transit.

Before installing, verify the electrical rating agrees with the specification on the rating plate.

## LOCATION

Position the appliance in its installation location. Check that there are sufficient clearances to service the controls, door swing, etc. Also adequate clearance must be left for making the required supply and drain connections.

Allow enough space between any other piece of equipment or wall for service access. Service to the controls may be required on the left and/or right side panels of the cabinet.

## INSTALLATION CODES AND STANDARDS

The appliance must be installed in accordance with:

**In Canada:** Provincial and local codes, or in the absence of local codes, with the Canadian Electric Code, CSA C22.1 (latest edition). Copies may be obtained from the Canadian Standard Association, 178 Rexdale Blvd., Etobicoke, Ontario, Canada, M9W 1R3.

**In the U.S.A.:** State and local codes, or in the absence of local codes, with the National Electrical Code, ANSI/NFPA-70 (latest edition). Copies may be obtained from The National Fire Protection Association, Batterymarch Park, Quincy, MA, 02269.

## INSTALLATION INSTRUCTIONS

### LEVELING AND ANCHORING THE CABINET

1. Place appliance in the installation position.
2. Place a carpenter's level on top of the appliance and turn the adjustable feet to level side-to-side and front-to-back.
3. Mark hole locations on the floor through the anchoring holes provided in the rear flanged adjustable feet.
4. Remove appliance from installation position and drill holes in locations marked on the floor. (See installation diagram on page 4.) Insert proper anchoring devices (not supplied).
5. Place appliance back in the installation position.
6. Place carpenter's level on top appliance and re-level side-to-side and front-to-back.
7. Bolt and anchor appliance securely to the floor.
8. Seal bolts and flanged feet with silastic or equivalent compound.

## ELECTRICAL CONNECTIONS

 **WARNING**

Electrical and grounding connections must comply with the applicable portions of the National Electrical Code and/or other local electrical codes.

 **WARNING**

Disconnect electrical power supply and place a tag on the disconnect switch to indicate that you are working on the circuit.

 **IMPORTANT**

Use copper wire suitable for at least 200 degrees Fahrenheit (90 degrees Celsius). The steamer must be grounded. The wiring diagram is located on the inside right hand panel as you face the steamer.

## EXHAUST HOOD

An exhaust system should be located directly above the appliance to exhaust steam and heat generated by the appliance.

## PLUMBING CONNECTIONS

 **WARNING**

Plumbing connections must comply with applicable sanitary, safety, and plumbing codes.

## WATER SUPPLY CONNECTION

The incoming cold water supply connection, at the rear of the boiler cabinet, requires 3/8" tubing and water pressure of 25 - 50 psig. A manual shut-off valve must be provided convenient to the boiler; this valve should be open when the boiler is in operation.

 **IMPORTANT**

Failure or malfunction of this appliance due to poor water quality is not covered under warranty. See Water Quality Statement (Page 4).

## DRAIN CONNECTION

The appliance drain (2" IPS) should be piped to a floor drain near the boiler (not directly under). There should be no solid drain connection; an "open gap" between the drain pipe and the floor drain is required.

 **IMPORTANT**

If your equipment was supplied with split water lines and a filter, connect the filter system to the connection marked "BOILER FEED" only. Make a second connection to the "CONDENSER FEED" from a cold and unfiltered water supply.

# OPERATION

## BOILER SECTION

Electrically powered steam generators are available with standard boiler controls or ASME CSD-1 compliant controls. In addition to the ON/OFF power switch and indicator pilot light or the standard controls, the CSD-1 controls have in addition four more indicator pilot lights and a "Reset" switch. Follow the appropriate instructions for each.

### START-UP PROCEDURE, STANDARD CONTROLS

1. Turn on water and power supply to appliance.
2. Close the manual blowdown valve if the units is not equipped with the optional automatic blowdown valve.
3. Open door of cabinet and turn on Power Switch. Pilot light will come ON and water will begin to enter boiler. Once water level has reached the proper operating level as indicated on water gauge glass the heating elements will be energized and heat the water. When steam pressure has reached 11 psi the elements will de-energize and cycle on and off between 9 - 11 psi. The boiler is now ready for steam generation.

### START-UP PROCEDURE, CSD-1 CONTROLS

1. Turn on water and power supply to appliance.
2. Close the manual blowdown valve if the units is not equipped with the optional automatic blowdown valve.
3. Open cabinet door and turn "ON" power switch.

The green pilot light will come "ON." Water will begin to enter the boiler. When enough water has entered the boiler the (red) "Low Water" pilot will come on for approximately 10 seconds and then the (amber)"Standby" pilot light will come.

4. Press the "Reset" switch to begin boiler operation.

The "Standby" pilot light will go off and the boiler will begin operation. When steam pressure has reached 11 psi the elements will de-energize and cycle on and off between 9 - 11 psi. The boiler is now ready for steam generation.

## NORMAL BOILER OPERATING CYCLE

### WATER FILL CYCLE

On the initial filling of the boiler, units equipped with CSD-1 controls require that the "Reset" switch be pressed to initialize the safety lockout circuit. Once the water in the boiler has reached proper level, the level control will stop the flow of water to the boiler. As water is consumed in the production of steam, the level control will supply and maintain safe water level in the boiler.

### FIRING CYCLE

The elements are operated by pressure sensing devices. On initial operation, the boiler should reach 11 psi in approximately 15 minutes. At this point the operating pressure switch will open, de-energizing the elements. When the pressure drops to 9.0 psi, the pressure switch closes, energizing the elements.

### CONDENSING DRAIN, (OPTIONAL)

A thermostat is located in the drain assembly and is activated by the temperature of steam. The thermostat operates the cooling solenoid, supplying water to the drain to condense the steam.

### AUTOMATIC BLOWDOWN VALVE, (OPTIONAL)

If the unit has an automatic blowdown valve, it is activated when the main power switch is turned "ON". The boiler will drain when the main power switch is turned "OFF."

## SAFETY LOCKOUT CONDITIONS

### HIGH TEMPERATURE CONDITION, STANDARD CONTROLS

A high temperature safety device is installed on the boiler. Should the temperature exceed the limit of this device, the boiler will be shut down. As the temperature returns to a safe level, normal boiler operation will resume.

### HIGH TEMPERATURE CONDITION, CSD-1 CONTROLS

A high temperature safety device is installed on the boiler. Should the temperature exceed the limit of this device, the boiler will be shut down and switch to a state of lockout. The "Temperature" pilot light (red), and the "Standby" pilot (amber), will come on.

### HIGH PRESSURE CONDITION, CSD-1 CONTROLS

A high pressure safety switch is installed on the boiler. Should the pressure exceed the limit of this device, the boiler will be shut down and switch to a state of lockout. The "Pressure" pilot light (red), and the "Standby" pilot (amber), will come on. Should this device fail to operate, the safety relief valve will open.

### LOW WATER CONDITION, STANDARD CONTROLS

A low water safety cut off is supplied with the boiler. Should the water level fall below normal operating levels, the boiler will shut down. If the water level is returned to a safe level, normal boiler operation will resume.

### LOW WATER CONDITION, CSD-1 CONTROLS

A second low water safety cut off is supplied with the boiler. Should the water level fall below normal operating levels, the boiler will shut down and switch to a state of lockout. The "Low Water" pilot light (red), and the "Standby" pilot (amber) will come on.

## SHUT DOWN

Turn off power switch, open manual drain valve. If unit is equipped with automatic blowdown valve, it will open and drain the boiler.



## COOKER SECTION

### CAUTION

Live steam and accumulated hot water in the compartment may be released when the door is opened.

Start-up procedures for your steamer must be completed once daily prior to operation (see instruction plate or above for boiler start up procedures).

With ready pilot light on, preheat steamer compartment for one minute when the steamer is to be first used for the day or whenever the compartment is cold.

1. Close compartment doors and set timer to “1 minute”.
2. When buzzer sounds, set timer to the “OFF” position.
3. Steamer is now ready for cooking.
4. With cooking compartment preheated and ready pilot light on, place pans of food to be cooked into compartment and shut door.
5. Set timer to cooking time desired. Cooking cycle may be interrupted at any time by opening door and resumed again by closing door.
6. When buzzer sounds, it indicates the end of the cooking cycle and that no more steam is entering the compartment. Cooking pilot light will go off and ready pilot light will come on. Buzzer must be shut off by turning the timer to its off position.

### CAUTION

An obstructed drain can cause personal injury or property damage.

Frequently check that the compartment drain and plumbing is free of all obstructions. Never place food containers, food or food portion bags in the cooking compartment in such a way that the compartment drain becomes obstructed.

### IMPORTANT

Each compartment is equipped with a removable drain screen. Frequently check the drain screen for accumulation of food particles. Should food particles accumulate against, or clog the drain screen, remove it, clean it thoroughly and then replace it in its original position.

## SHUT DOWN

1. To shut down cooking compartment, set timers to their OFF position and leave doors slightly open.
2. At the end of the day, the steam supply must be shut off. Open the door of cabinet base and turn off power switch. Open manual drain valve. If unit is equipped with automatic blowdown valve, it will open and drain the boiler.

# PERIODIC MAINTENANCE

## ⚠ WARNING

Disconnect the unit from the power supply before cleaning or servicing appliance.

## ⚠ CAUTION


SCALD HAZZARD. Protect yourself. When flushing control, hot water and steam will flow out of the drain.

## NOTICE

Contact the factory, the factory representative or local service company to perform maintenance and repairs. Refer to warranty terms.

## IMPORTANT INSTRUCTIONS

Be sure to flush your boiler water level control daily. Failure to follow this procedure can cause the control to malfunction resulting in serious boiler damage.

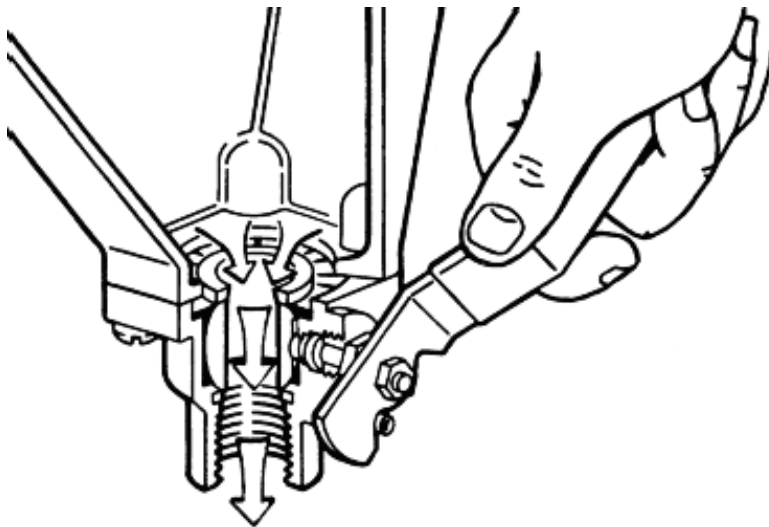

The Boiler Water Level Control installed on your boiler requires periodic maintenance. As boiler water circulates into the float chamber, sand, scale and other sediment may be deposited in the float chamber. While the chamber has been designed with a large accumulation bowl, it is necessary to flush the sediment from the chamber by blowing down the control so that the accumulation of sediment does not interfere with the movement of the float in the control. Control must be flushed at least once a day.

## DESCALING BOILER

## ⚠ CAUTION

Take extra caution when blowing down water level control or tripping safety valve as extreme hot water and live steam are present.

It is recommended that the boiler be checked every 90 to 120 days for scale build up. Regular maintenance should be carried out at this time.

1. With boiler empty, close manual blowdown valve. If appliance is equipped with automatic blowdown, turn water supply OFF to appliance. Turn power switch ON. This will energize and close the blowdown valve.
2. Remove 3/4" pipe plug from fitting on left front of boiler.

3. Insert appropriate hose or tube through fitting and pour in (1/2) half gallon (US) of CLR Descaling Solution or use the Optional Deliming Assembly DPA-1 available from your dealer.
4. Replace 3/4" pipe plug securely.
5. Open water supply to appliance allowing water to fill boiler to required level.
6. Let appliance cycle. Allow two hours for descaling and cleaning. DO NOT TURN ON STEAM to the compartments.
7. Open both the blowdown and low water level control valves for complete drainage and then close both valves.
8. Turn appliance switch ON. When boiler is completely filled turn power switch OFF. This will rinse and drain boiler. Appliance with manual blowdown valve must be opened to drain.
9. Complete Step 8 twice to assure boiler is completely rinsed.
10. Appliance is now ready for use.

## ADJUSTMENTS

### IMPORTANT

At least twice a year have an authorized service person clean and adjust the unit for maximum performance.

## TO CALIBRATE PRESSURE SWITCHES

### NOTICE

Pressure switches are factory set. Calibration is only required if pressure switches are replaced or if adjustment is required. Pressure switch range is from 1 to 15 psi.

Adjust all settings to maximum on high signal adjustment screw on pressure switches.

Adjust in the following sequence:

- High limit pressure switch.
- Override pressure switch.
- Operating pressure switch.
- Turning screw clockwise to increase, counterclockwise to decrease pressure.
- Use relief valve to release pressure from boiler for setting adjustments.

#### 1. HIGH LIMIT PRESSURE SWITCHES

Allow pressure to build until unit shuts off. This should occur at 15 psi. Set the high signal to switch at 14.5 psi on the gauge and the low signal to 13.0 psi.

#### 2. OVERRIDE PRESSURE SWITCHES

Allow pressure to increase to 13 psi. Set the high signal to switch at 13 psi on the gauge and the low signal to 11 psi.

#### 3. OPERATING PRESSURE SWITCHES

Set the high signal to switch at 11 psi on the gauge and the low signal to 9 psi.

4. Release pressure in boiler to below 9 psi. Elements will come on. Once pressure has reached 11 psi, elements will shut off. Repeat this process several times to make sure elements come on at 9 psi and shut off at 11 psi.

Once completed, pressure switches have been calibrated.

Should your unit not have the High Limit pressure switch, start procedure at Override pressure switch.

## SERVICE

Contact your local authorized service office for any repairs or adjustments needed on this equipment.

# CLEANING

 **WARNING**

Disconnect the unit from the power supply before cleaning or servicing appliance.

 **WARNING**

Never spray water into electric controls.

 **CAUTION**

Do not use cleaning agents that are corrosive.

 **CAUTION**

Live steam and accumulated hot water in the compartment may be released when the door is opened.

1. Keep exposed cleanable areas of unit clean at all times.
2. Thoroughly wash oven cavities, door liners, and pan racks at the end of each day or as required with a mild detergent and water to prevent bacterial growth and odours.
3. Remove drain screens from inside compartment drains. Using a plastic bottle brush and mild detergent, clean inside the drain opening ensuring there is no food residue or blockage. Clean the drain screen and replace in its original position.
4. Wash gasket sealing surface with mild detergent to remove harmful food acids and rinse.
5. Water level control should be opened daily to blow down sediment and scalant.

 **CAUTION**

Take extra caution when blowing down water level control or tripping safety valve as extreme hot water and live steam are present.

6. Observe that the water in gauge glass is clean and clear. Extreme murkiness in water indicates inadequate water quality.
7. Safety valve should be tripped during operation once a week to assure that it functions properly.
8. Keep all exposed cleanable areas of unit clean at all times. **DO NOT GET WATER IN ELECTRICAL BOX OR ANY ELECTRICAL COMPONENTS.**

# TROUBLESHOOTING

**NOTICE**

Contact the factory, the factory representative or local service company to perform maintenance and repairs. Refer to warranty terms.

**NOTICE**

At least twice a year have an authorized service person clean and adjust the unit for maximum performance.

## DOOR LEAKS

1. Check for damage to door gasket.

## WATER ACCUMULATES IN THE COMPARTMENT

1. Compartment drain screen clogged. Remove and clean thoroughly and then replace.

## WATER NOT BEING SUPPLIED TO BOILER

1. Water supply is "OFF".
2. Defective water fill solenoid.
3. Water level control clogged or defective, unable to operate fill valve.
4. Check drain valve is closed. Also check that water level control valve is closed.
5. Supply water pressure too low.

## AUTOMATIC BLOWDOWN VALVE DOES NOT DRAIN

1. Defective Blowdown valve.
2. Heat exchanger build up of scalant clogging drain lines and valve.

## BOILER ACHIEVES PRESSURE SLOWER THAN NORMAL

1. Heavy build up of lime on elements.
2. Loose element connections.

## SAFETY VALVE BLOWS

1. Defective safety valve.
2. Pressure too high. Pressure switch requires adjustment (lower) or may be defective.

# COOKING CHART

The following table lists suggested cooking times and weights. These times, which will vary depending on initial product temperature, size, shape, etc., are approximate and should be adjusted to suit your operation.

## PRODUCTS TO BE COOKED IN SOLID PANS

PRODUCT	TIMER SETTING (MINUTES)	WEIGHT PER PAN
Eggs, Scrambled	10 - 12	8 Dozen
Rice, Long Grain (Cover with 4 cups water per pound.)	25	2 lb.
Pasta (Place perforated pan inside solid pan, cover pasta with cold water.)		
Spaghetti, Regular/Vermicelli	12 - 15	
Macaroni, Shells/Elbows	15 - 18	
Noodles, 1/2" wide	12 - 15	
Lasagna Noodles	15 - 18	
Frozen Casseroles, Lasagna	35	Full Pan
Meat Loaf, 3 - 5 pounds each	40	15 lb.
Beef		
Ground Chuck	20 - 25	10 lb.
Sliced as Purchased	35 - 40	10 lb.
Shrimp, Frozen, 10 per pound	5	4 lb.
Beans		
Baked	9	10 lb. Can
Refried	9	10 lb. Can
Canned Vegetables	6	10 Lb Can
Prunes, Dried	12 to 15	
Clams		
Frozen	10 - 12	3 Doz.
Fresh, Cherrystone	5 - 6	3 Doz.
King Crab, Frozen		
Claws	4	2-1/2 lb.
Legs	4 - 6	4-1/2 lb.
Lobster Tail, Frozen	6	10 lb.
Lobster, Live, 10 - 12"	5	4 Per Pan
Salmon Fillets, Frozen, 8 ounces each	5	7-1/2 lb.
Scallops, Fresh	4	3 lb.
Scrod Fillets, Fresh	3 - 5	4 lb.
Eggs		
Hard Cooked	15	4 Doz.
Soft Cooked	9 - 10	4 Doz.
Soft Yolk for Caesar Salad	6 - 8	4 Doz.
Chicken - Breasts, Legs, Thighs	20	15 lb.
Turkey, Frozen		
Breasts (2)	90	6 - 7 lb. Each
Cut Lengthwise	55	20 - 25 lb.
Corned Beef	40 - 75	6 - 8 lb.

PRODUCT	TIMER SETTING (MINUTES)	WEIGHT PER PAN
Hot Dogs or Wieners	3	80 - 100 Count
Asparagus Spears Frozen Fresh	10 - 12 5	3 Doz. 5 lb.
Beans Green, 2" Cut, Frozen/Fresh Lima, Frozen Baby Lima, Frozen	6 8 5	5 lb. 5 lb. 5 lb.
Broccoli Spears, Frozen Spears, Fresh Florets, Frozen	8 6 6	4 lb. 5 lb. 5 lb.
Brussel Sprouts, Frozen	6	5 lb.
Cabbage, Fresh, 1/6 Cut	8	5 lb.
Carrots Baby Whole, Frozen Crinkle Cut, Frozen Sliced, Fresh	8 7 - 8 11	7 lb. 4 lb. 9 lb.
Cauliflower, Flowerettes Frozen Fresh	6 7 - 8	4 lb. 5 lb.
Celery, 1" Diagonal Cut	7	5 lb.
Corn Yellow Whole Kernel, Frozen Cobbettes, Frozen  Corn-On-Cob, Fresh	5 8 16 - 18 10 - 12 16 - 18	5 lb. 27 Ears 80 Ears 18 Ears 54 Ears
Peas, Green	6	5 lb.
Potatoes, Whole Russet	55	10 lb.
Spinach Chopped, Frozen Defrosted Fresh Cut	17 5 3	6 lb. 6 lb. 2 lb.
Squash, Acorn Halves	25	10 Halves
Zucchini, Slices	8	10 lb.
Frozen Mixed Vegetables	6 - 7	5 lb.
Fruit, Blanch for Peeling, Grapefruit Oranges	3	
Pineapple, Whole for Cutting	4	

## COOKING HINTS

Where possible, spread food out evenly in pans. Do not allow food to protrude above pans, since this will interfere with steam circulation between pans in the compartment.

Always preheat compartments for satisfactory results. When time does not allow for defrosting of frozen vegetables, such as loose-pack peas, corn, diced carrots, etc., they may be cooked at once provided just half of the suggested portions in the cooking chart are used.

# ECX-2-24, ECX-2-36, ECX-10-24 & ECX-10-36 Electric Cabinet Base Convection Steamer



A product with the Crown name incorporates the best in durability and low maintenance. We all recognize, however, that replacement parts and occasional professional service may be necessary to extend the useful life of this appliance. When service is needed, contact a Crown Authorized Service Agency, or your dealer. To avoid confusion, always refer to the model number, serial number, and type of your appliance.



## CROWN FOOD SERVICE EQUIPMENT

 A Middleby Company

70 Oakdale Road, Downsview (Toronto) Ontario, Canada, M3N 1V9  
Telephone: 919-762-1000      [www.crownsteamgroup.com](http://www.crownsteamgroup.com)