

User manual

Invoq Essence

6-1/1 GN

10-1/1 GN

20-1/1 GN

Electric

EN - English

Online manuals



Original English document

Table of contents

Introduction	8
General information	10
Target group	10
Technical changes	10
More documentation	10
Warranty	10
Permissions	10
Screen dumps	10
Symbols used in this document	11
Icons used in the user interface	12
Safety information	17
General safety instructions	17
Safety instructions before use	18
Safety instructions during use	18
Personal protective equipment	19
Product introduction	20
Product description	20
Applications	20

Control functions 21

Using the "Tutorial" function.....	21
Main menu	21
Manual menu	22
Recipes menu	22
CareCycle menu.....	22
SmartChef menu.....	23
Settings menu.....	23

Operating the oven 24

Using the SmartTouch display	24
Using the fault log function	25
Using the cooking functions	26
Setting the oven temperature.....	26
Setting the time interval	26
Setting the fan speed.....	29
Setting the exhaust function	29
Setting the steam injection time	30
Setting the core probe temperature.....	31
Using the convection function.....	32
Recommended convection settings.....	32
Using the steaming function	33
Using the combi function.....	34
Automatic preheating the oven.....	37
Automatic cooling down the oven.....	37
Using the Recipes menu.....	37
Creating a recipe	38
Using a recipe.....	41
Editing a recipe.....	41
Adding an existing recipe to Favourites.....	41
Duplicating a recipe.....	42
Deleting a recipe.....	42
Setting QSR position.....	43
Using the USB function	45

Using the SmartChef menu	51
Cooking modes for meat	51
Using the CareCycle menu	52
Starting a CareCycle wash	52
Descaling the oven cavity	54
Draining the oven	54
Types of wash cycles	55
Scheduling a CareCycle wash	56
Cooling down the oven	57
Using the proving function	58
Using MenuPlanner	59
Using the Startup timer function	70
Using the Settings menu	72
Changing user	72
Finding the system information	72
Changing the general settings	73
Changing the cooking settings	80
Changing the oven setup	82
Calibrating the oxygen sensor	83
Calibrating the oven door	83
Activating Open Kitchen	84
Monitoring logs and statistics	84
Updating the software	85
Creating a system report	85
Replacing the HydroShield water filter	86
Loading and unloading a roll-in trolley	87
Using the core probe	88
Meats with larger amounts of connective tissue	89
Buffets and displays	89

Cleaning the oven 90

Cleaning the oven exterior	90
Cleaning the codensation hood/Hoodini exterior	90
Using the hand shower	91

Cleaning the air intake filter.....	91
Cleaning the drip tray.....	92
Cleaning the Hoodini filter.....	92
Cleaning the sieve.....	93
Regular maintenance and cleaning.....	93

Upgrading the oven	94
--------------------	----

Technical data	96
Capacity.....	96
Core temperature guidelines for meat.....	96
Core temperature guidelines for fish.....	97
Core temperature guidelines for Delta-T.....	97

Disposing of the oven	98
-----------------------	----

Declaration of conformity	98
---------------------------	----

This page is intentionally left empty.

Introduction

Dear customer,

Congratulations on purchasing your new Invoq oven.

Invoq Essence is designed to provide exactly what you need to cook and bake with confidence – no more, no less. It combines the essential performance of a professional combi and bake oven with the latest Invoq technology, presented in a clean and intuitive Scandinavian design. From day one, the oven integrates seamlessly into your kitchen and daily workflow.

The oven is also designed with future needs in mind. A range of upgrade packages allows you to add additional functionality as your business grows. These packages can introduce advanced cooking intelligence, enhanced precision, connectivity and workflow optimisation, allowing the oven to adapt to increasing demands without requiring replacement of the appliance.

This manual contains the information you need to use and maintain your oven. We recommend that you read the manual and familiarise yourself with the functions and features of the oven. This will ensure optimal cooking results and safety. Please make the manual available to all users of the product and retain it for future reference. The latest version of the manual can be downloaded from our website.



General information

Target group

This document is aimed at persons who work in large and commercial kitchens. The oven must only be used by trained personnel.

The oven must not be used or maintained by the following groups of people:

- Persons with reduced, sensory or mental abilities.
- Persons with lack of experience and knowledge of the oven.
- Children.

In certain circumstances, such persons may operate the oven after having completed a special training and if they are assisted by trained and experienced personnel who takes responsibility of their safety.

Technical changes

This document is subject to changes without notice.

More documentation

You find more documentation about the oven at <https://invoqoven.com/en/login/>.

Warranty

You find more information about our warranty conditions at our website. For more information, see the back page.

Permissions

This manual describes the oven function in superuser mode. If a function is not accessible, make sure that you are logged in as a superuser. For more information about how to change user, see section "Changing user".

Screen dumps

The screen dumps in this manual are based on an Invoq Essence 10-1/1 GN oven with core probe.

Symbols used in this document



DANGER

Dangerous situation which will, if not avoided, result in death or serious personal injury.



WARNING

Dangerous situation which may, if not avoided, result in death or serious personal injury.



CAUTION

Dangerous situation which will, if not avoided, result in minor or moderate personal injury.



SIGNAL WORD

Description of the hazard
Action to avoid the hazard.

IMPORTANT!

If these instructions are not observed, it may result in malfunction or damage to the oven.



Tips and advice that make the work easier.



A red or grey circle with a diagonal bar indicates that an action must not be taken or must be stopped.



A blue or grey circle with a white graphical symbol indicates that an action must be taken.

Icons used in the user interface

Navigation icons

Symbol	Description	Symbol	Description
	Up		Move
	Down		Undo
	Forward		Remove
	Back		Exit

State icons

Symbol	Description	Symbol	Description
	Standby		

Information icons

Symbol	Description	Symbol	Description
	Search		Support
	Help		Detail
	WiFi		

Menu bar icons

Symbol	Description	Symbol	Description
	Wipe screen		Language
	Wash		Home

Special user icons

Symbol	Description	Symbol	Description
	Activate		MenuPlanner
	Locked		QSR

Manual operation icons

Symbol	Description	Symbol	Description
	Manual		Steam injection
	Steam		Probe
	Convection		Cook & Hold
	Combi		Delta-T
	CombiSense		Cool down
	CombiSpeed		Preheat
	Timer		Proving
	Temperature		RackTimer
	Fan		Continuous timer
	Exhaust closed		More
	Exhaust open		

Settings submenu icons

Symbol	Description	Symbol	Description
	Settings		Configure

SmartChef icons

Symbol	Description	Symbol	Description
	Slow speed		Fast speed

CareCycle icons

Symbol	Description	Symbol	Description
	Turbo wash		Intensive wash
	Eco wash		Descaling cavity
	Eco+ wash		Light wash
	Medium wash		Flush
	Schedule		Draining

Recipe step icons

Symbol	Description	Symbol	Description
	Load product		Brushing
	Load product and probe		Empty oven
	Insert core probe		Pause
	Stir		Note

Running recipe icons

Symbol	Description	Symbol	Description
	Running		Stop

Recipe done icons

Symbol	Description	Symbol	Description
	Edit		Import
	Done		Add image
	Duplicate		Delete
	Export		

Recipe structure icons

Symbol	Description	Symbol	Description
	Recent		Group
	Favourite		All recipes

Recipe icons

Symbol	Description	Symbol	Description
	Beef		Nuggets
	Pork		Grilled
	Lamb		Miscellaneous
	Venison		Desserts
	Poultry		Cake
	Chicken		Cakes
	Chickens		Apple strudel
	Chicken parts		Cupcakes
	Fish		Bread
	Seafood		Breads
	Sausage		Rye bread
	Sausage roll		Potatoes
	Pie		French fries
	Gratin		Rice and pasta
	Loaf		Vegetables
	Ham		Favourite

Safety information



Read this document before using, installing or servicing the product. Installation and operation must comply with local regulations and accepted codes of good practice.



Installation, maintenance and repair must be carried out by qualified installation and service technicians only. Installation and/or service by others than qualified technicians may result in injury to the operator and/or damage to the oven.

General safety instructions



DANGER

Risk of fire or explosion

- Do not store flammable liquids or gases close to the oven.



DANGER

Risk of injury

- Follow the instructions in this manual carefully.
- Make sure this manual is freely available to everyone working with the oven and for later reference.



DANGER

Risk of squeezing

- Never lift the oven from the left-hand side.



Do not remove the baffle plate in front of the fan wheel.



This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision

Safety instructions before use



DANGER

Risk of drawing-in or trapping

- Always make sure no humans or animals are unintentionally in the cavity before starting the oven.

Safety instructions during use



WARNING

Risk of crushing

- Always use the parking brake on roll-in trolleys.



WARNING

Risk of burn injury

- Use the oven with caution when the door is open.



WARNING

Risk of scalding

- Open the door carefully to avoid being hit by steam and warmth.



DANGER

Risk of scalding

- Never spray water into the oven cavity when the oven temperature is above 100°C.



WARNING

Risk of scalding

- Place trays of hot liquids or products that become liquid during preparation below eye height in the oven.
- Be very careful when removing trays with hot liquids from the oven.



CAUTION

Risk of burn injury

- Do not touch hot surfaces - the temperature of some surfaces may exceed 60°C.

**WARNING**

Risk of chemical burns

- Never use the oven during automatic cleaning.

**WARNING**

Risk of crushing

- Always close the door with one hand on the handle to avoid crushing your fingers.

**WARNING**

Risk of slipping

- Be careful when you remove the used HydroShield water filter as it is heavy and filled with water.

**CAUTION**

Risk of crushing

- Never stick your fingers into the air inlet when the oven is running.

Personal protective equipment

**CAUTION**

Risk of skin irritation

- Use personal protective gloves to avoid direct contact with the CareCycle Clean and CareCycle Descale tabs.

Product introduction

Product description

The Invoq Essence combi oven is a professional kitchen appliance designed to deliver essential combi and baking performance with simple, intuitive operation.

The oven combines convection, combi and steam cooking modes in one platform, allowing you to roast, bake, steam and reheat with consistent results. Uniform airflow and intelligent sensors continuously monitor and regulate the cooking process to ensure even heat distribution and reliable results across every rack.

The 7" touchscreen provides clear, smartphone-like navigation for straightforward daily operation, whether using preset recipes or manual control. Invoq Essence is available in several sizes and configurations, allowing the oven to be adapted to different kitchen layouts and production needs.

Upgrade packages allow additional functions such as advanced cooking intelligence, precision control and connectivity to be added as operational needs develop.

Applications


The oven must only be used for cooking food commercially, for example in restaurant kitchens, in large and commercial kitchens in institutions as well as in bakeries, convenience stores, service stations and the like.

The oven must only be operated by hands.

The oven must not be used for any other purposes, as it can damage the product and at worst cause harm to people. The oven must not be used for continuous mass production of food.

No instruments or mechanical tools must be used as it can damage the product and cause unintended behaviour.

The manufacturer assumes no liability for the consequences of unintended use of the oven.

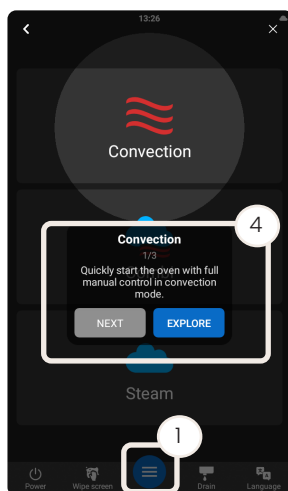

Control functions


Using the “Tutorial” function

The “Tutorial” function provides a guided tour to help you optimise oven operation.

1. Touch the blue icon in the home screen menu.
2. Touch “Settings”.
3. Touch “Tutorial”.
4. Touch either “Next” to go to the next menu or “Explore” to review the settings within the selected menu.

Main menu

From this menu, you have access to the three cooking modes “Convection”, “Combi” and “Steam” as well as the menubar.

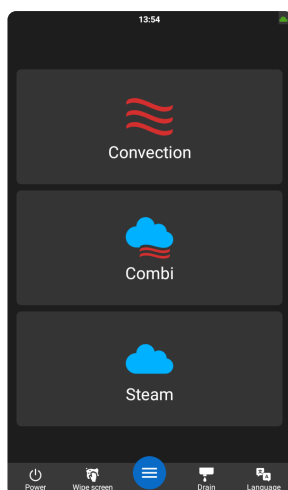


If you touch the blue icon you have access to the following functions:

- “Manual”
- “Recipes”
- “CareCycle”
- “Proving”
- “Cool down”
- “Startup timer”
- “Settings”

These functions are only available if the corresponding upgrade package is installed.


- “SmartChef”
- “MenuPlanner”

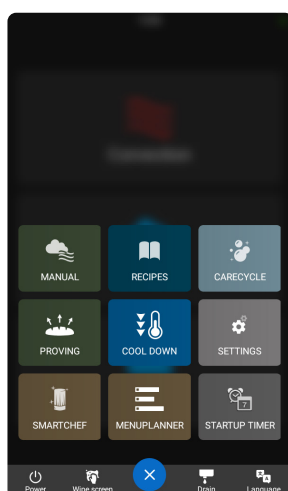


The menubar is configurable. However, the standard settings allow you to do the following:

1. Turn the oven on/off.
2. Wipe the screen without changing any settings.
3. Access the different oven functions.
4. Drain the oven.
5. Change language.

For more information about how to configure the menubar, see section “Changing the startup and user profile”

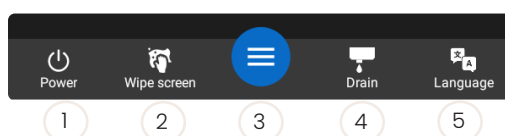

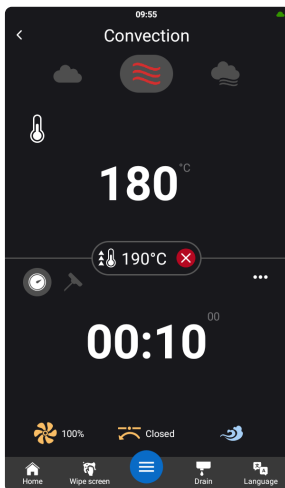


Manual menu

In this menu, you can choose between three cooking modes: I

- Steaming.
- Convection.
- CombiSense/CombiSpeed.

From this menu, you can set manual functions such as:


- Oven temperature
- Exhaust
- Preparation time ("Continuous time" and "RackTimer")
- Core temperature
- Fan speed
- Steam injection interval

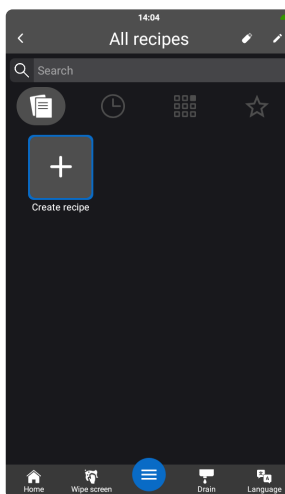

Recipes menu

From this menu, you can do the following:

- Add recipes.
- See the most recent used recipes.
- See the recipe groups.
- See favourites.

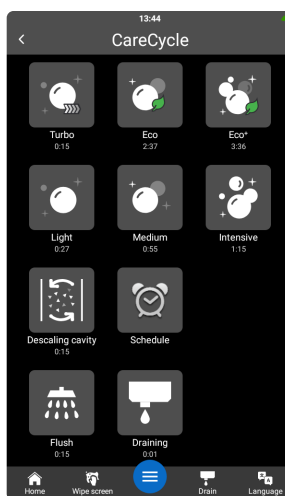


CareCycle menu

From this menu, you have access to the following functions:

- "Light"
- "Medium"
- "Intensive"
- "Descaling cavity"
- "Flush"
- "Draining"

These functions are only available if the corresponding upgrade package is installed.:

- "Turbo"
- "Eco"
- "Eco+"
- "Schedule"

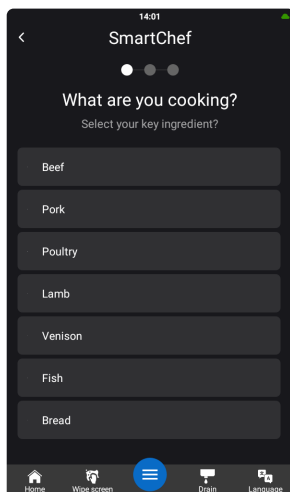


SmartChef menu

This function is only available if the corresponding upgrade package is installed.

From this menu, you can do the following:

- Select key ingredient.
- Select cooking mode.
- Adjust core temperature, colour, mode, size, time and speed depending on the cooking mode.

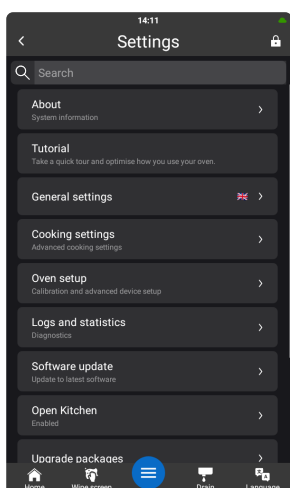

Settings menu

From this menu, you can do the following:

- Change language, time format, date format, sounds, units, cooking settings and oven setup settings.
- Set the time, date, water filter, startup, network and cloud service.
- Find information about software version, serial number, IP address, reports, fault log, fault statistics and service counters.
- Turn the screen saver on/off.
- Install software.

Operating the oven

Using the SmartTouch display

The SmartTouch display provides a user friendly and easy way to operate the oven.

1. To select an item, touch the button.
2. To scroll through a list, drag your finger up or down.









Use the wheel, to adjust temperature in 5 degrees intervals.


3. To return to the previous display, touch the arrow icon in the upper left corner.
4. To enter time and temperature using the keypad, touch and hold for two seconds on the display.



Use the keypad, to adjust temperature in 1 degree intervals.

5. Key in the value and touch the blue key.
6. To change the cooking function while the oven is operating, select an alternative cooking function by touching the icon.

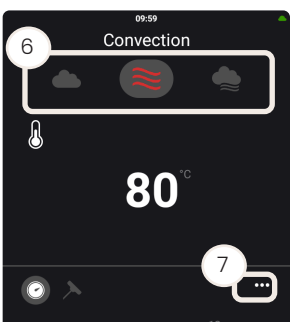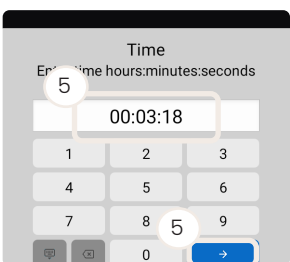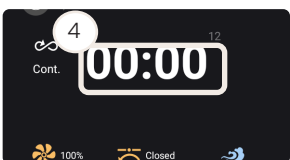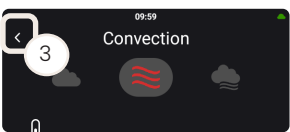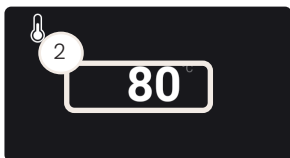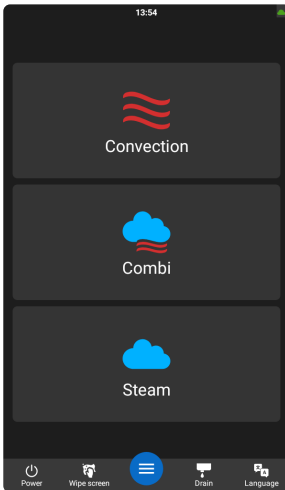

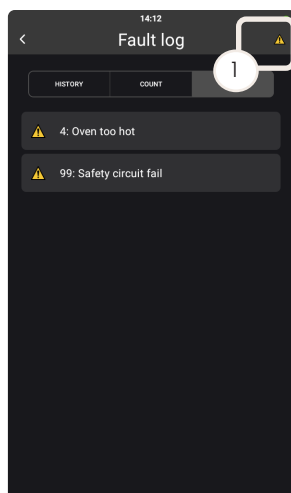


Using the fault log function

This function is only visible in case of active errors. You can always access the fault log function from the “Logs and statistics” menu in the “Settings” menu. The warning icon indicates that there is an active fault, and you can access the fault log function on a running oven.

1. Touch the warning icon in the home screen menu.
2. Check the error number in the faultfinding manual.
3. Follow the guidelines in the faultfinding manual.
4. Contact your local service partner, if necessary.


Value	Description
“History”	A chronological overview of the fault logs on the oven.
“Count”	A summary of the faults that have been on the oven.
“Active”	Displays any active faults on the oven.

Table 1

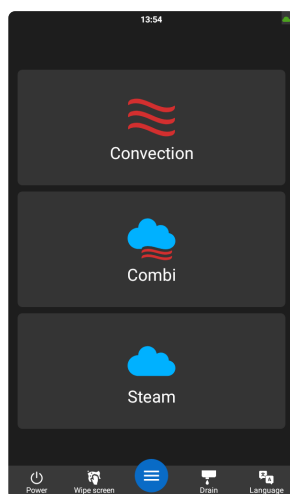


Using the cooking functions

1. Touch one of the cooking functions "Convection", "Combi" or "Steam" to enter manual mode.
2. The last used functions and settings are viewed.
3. The oven starts preheating.

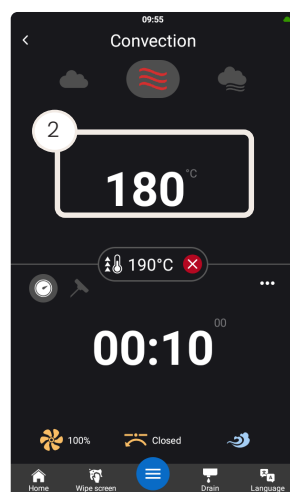


Setting the oven temperature

1. Touch the screen.
2. Drag your finger up or down to select the desired temperature. Or touch and hold for two seconds on the display to use the keypad.

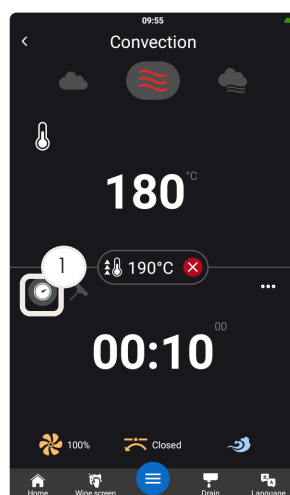


Setting the time interval


1. Select the timer icon.
2. Touch the display.

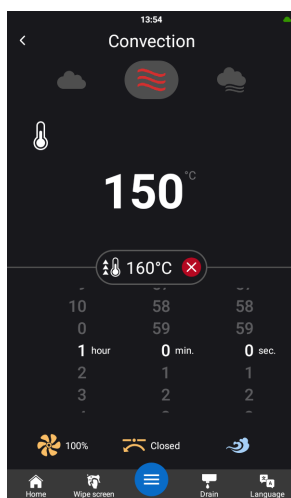

3. Drag your finger up and down to select the hours and minutes from the list. Or touch and hold for two seconds on the display to use the keypad.

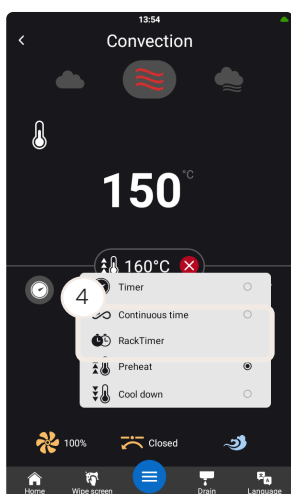

4. If you want to use the "Continuous time" function, touch the more icon and select "Continuous time".
If you want to use the "RackTimer" function, touch the more icon and select "RackTimer".

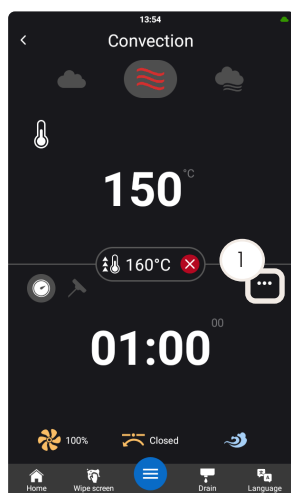


Using the RackTimer function

The RackTimer function enables you to set one timer for each individual rack. In this way, you can cook different products on the same rack or on different racks in the same cooking mode.

The RackTimer function can be used in these cooking modes: "Steaming", "Convection" and "Combi".

1. Touch the more icon in the timer display.
2. Touch "RackTimer" and a new display opens from which you can choose between a number of racks depending on the oven size.

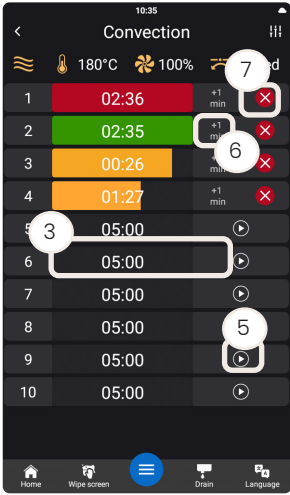

3. Touch the time on the desired rack.



You can use the probe on one of the racks.



You can edit time or temperature in a running recipe.



Opening and closing the door will clear the racks that are done.

4. Drag your finger up and down the minute and second wheel to set the time. Or touch and hold for two seconds on the display to use the keypad.




Each rack is set to five minutes. Each rack will remember the previously set time.

- 5. Touch the activate icon next to the time to start cooking.
- 6. Touch "+1 min" to add one minute extra cooking
- 7. Touch the stop icon to stop or reset the timer.

Colour/action	Description
Yellow	Cooking.
Green + alarm	The cooking time is done.
Red	If the timer is not stopped after one minute.
+1	To add an extra minute of cooking time.

Table 2

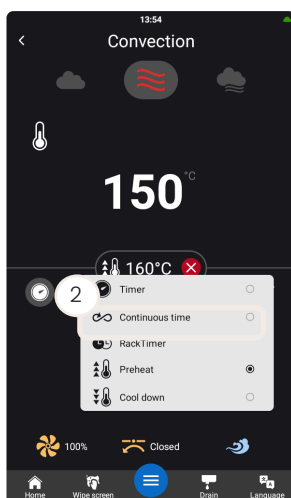

Using the continuous time function

In this function, the oven runs continuously until you stop the oven or change preparation mode.

1. Touch the more icon.
2. Select "Continuous time".

Setting the fan speed


The fan has five speeds from 30-100%. If the oven temperature is above 200°C, only the fan speeds from 50-100% are available.



If the corresponding upgrade package is installed, you might have nine fan speeds from 20-100%.

You can adjust the fan speed before you start a new process or during a running process.

1. Touch the fan icon.
2. Select the fan speed.

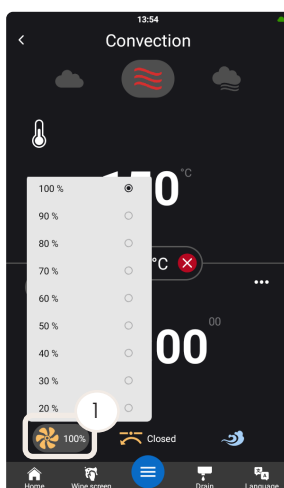


For delicate cooking of products such as puff pastry, cakes and smaller products, use a fan speed between 20-50%.




At low fan speeds, add 1-2 minutes extra cooking time for each 30 minutes.

Setting the exhaust function

1. Touch the exhaust icon.
2. Toggle between "Open" and "Closed".

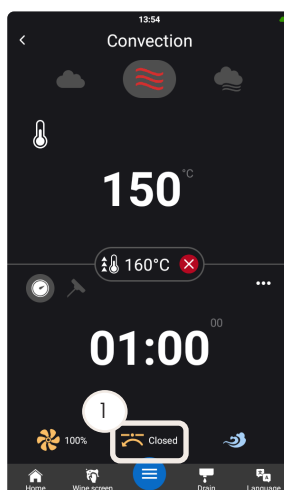


Open the exhaust to crisp up the surface of a product.

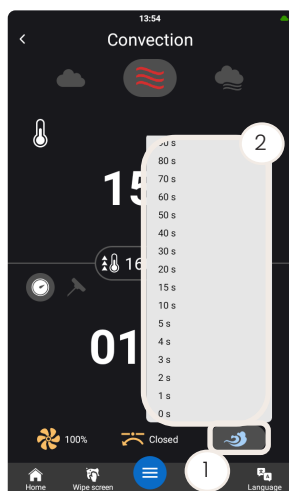

Setting the steam injection time

1. Touch the steam injection icon.
2. Select the desired steam injection time.


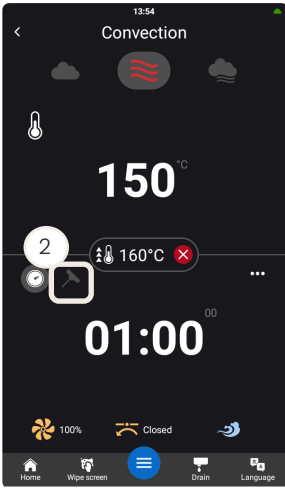


Setting the core probe temperature

This function is only available if the corresponding upgrade package is installed.


- 1. Select oven function.
- 2. Touch the core probe icon.
- 3. Touch the display and drag your finger up or down to select the desired temperature. Or touch and hold for two seconds on the display to use the keypad.
- 4. Touch the more icon to change the core probe cooking modes.

Core probe cooking mode settings

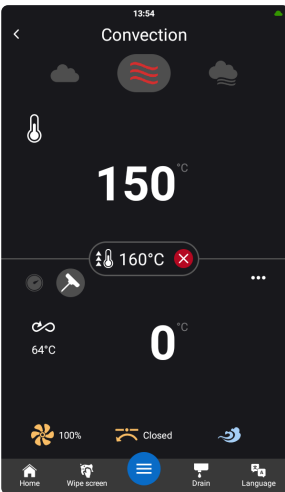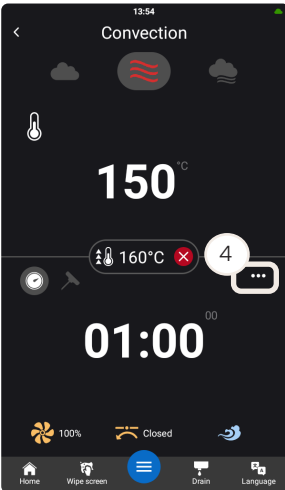

Cooking mode	Description
"Normal"	Use "Normal" when you want to use the core temperature to determine when the product is finished.
"Delta-T"	Use "Delta-T" to cook to a specific core temperature slowly with low gentle heat. The oven maintains a constant difference in temperature between the core temperature and the oven temperature. The oven temperature rises slowly as the core temperature rises. The default is set at 20°C.
"Cook & Hold"	Use "Cook & Hold" when you want to reach a specific core temperature, keep the food hot once it is done and tenderise the meat. It is also useful for overnight cooking.

Table 3

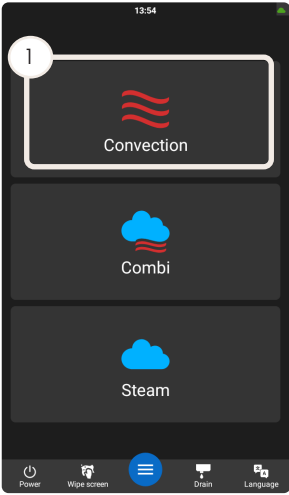


Using the convection function

- 1. Touch the convection icon.
- 2. Set the temperature.
- 3. Set the timer or the core probe mode.
- 4. Set the fan speed.
- 5. Touch the steam injection icon and select a time for steam to be added.
- 6. Touch the exhaust icon and select it to be either open or closed.




Set the exhaust function to open when baking bread and pastry, roasting pieces of meat or if you want to achieve a grill effect.

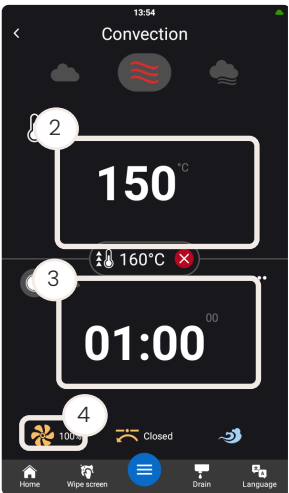


Recommended convection settings

Product	Cooking temperature [°C]	Exhaust
Cakes and biscuits	145-175	Closed
Baking	165-185	Open
Grilling	165-185	Open

Table 4

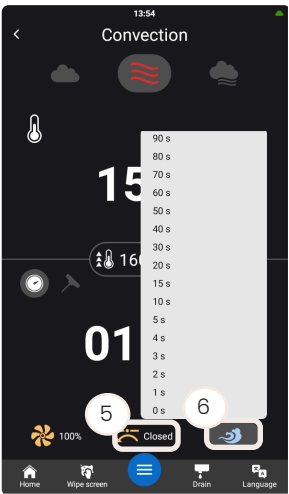

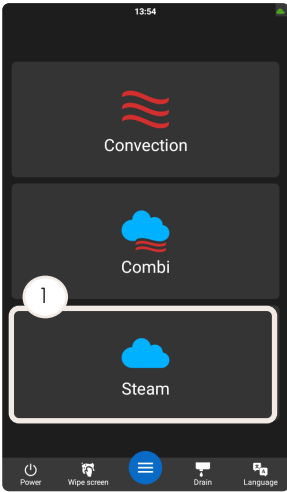

Using the steaming function



For the best result, do not load products until the oven has reached the set temperature.


- 1. Touch the steam icon.
- 2. Set the temperature.
- 3. Set the timer or the core probe mode.
- 4. Set the fan speed.

Recommended steaming settings



Temperature level	Steaming temperature [°C]	Product type
Low temperature steaming	65–90	Fish and small vegetables. IMPORTANT! Steam small vegetables at 80°C for 5–10 minutes to keep their colour and crispness.
Traditional steaming	98–100	Meat, pasta, potatoes, rice and root vegetables.
Forced steaming	100–130	Vegetables that require further processing and for faster processing of hard root and frozen vegetables, pasta and rice. IMPORTANT! Be careful when using this function.

Table 5

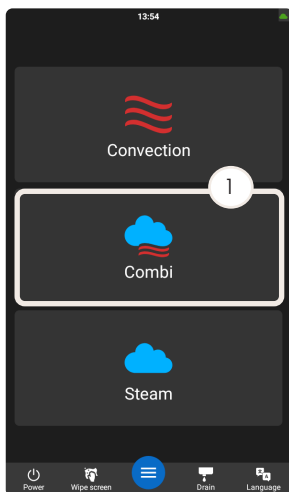

Using the combi function

Setting CombiSense

This function is only available if the corresponding upgrade package is installed.


The CombiSense function allows you to set an oven temperature and add a specific humidity percentage. The function automatically regulates the set percentage of humidity throughout the whole cooking process regardless of type and amount of product being cooked.

The CombiSense function minimises shrinkage and improves the appearance and flavour of the products.

The preferred humidity level is reached after 1-5 minutes depending on the amount of products in the oven.



To achieve the best result, do not load products until the oven has reached the set temperature.

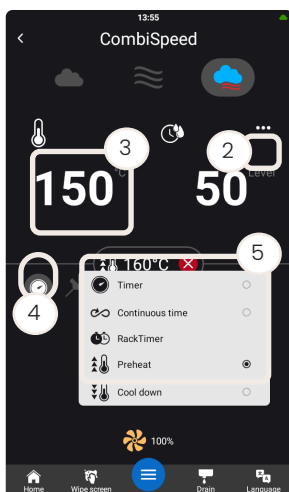

1. Touch the combi icon.
2. Touch the more icon and select "CombiSense".
3. Set the temperature.
4. Touch the timer icon and set the time.


To change the mode, touch the more icon to select either "Timer", "Continuous time", "RackTimer", "Preheat" or "Cool down".


5. Touch the core probe icon, the oven starts in "Normal" mode.

To change the mode, touch the more icon to select either "Normal", "Delta-T" or "Cook & Hold".7



This function is only available if the corresponding upgrade package is installed.

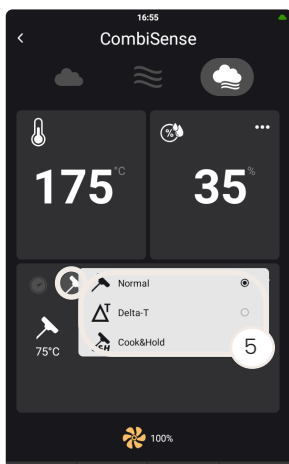

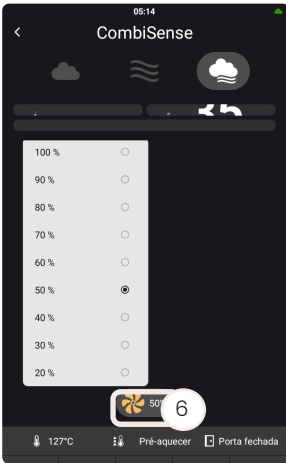


6. Touch the fan icon and set the fan speed.

Recommended humidity levels

Product	Humidity level [%]	Temperature [°C]
Roasting	30-40	170-190
Gravy production during braising of meat	70-80	145-165
Poaching fish, poultry and crispy vegetables	90-100	70-120
Steaming potatoes, rice, pasta, meat, etc.	100	100
Bake-off	20-40	170-200
Snacking	10-30	180-210
Artisan bake	0-40	180-230

Table 6

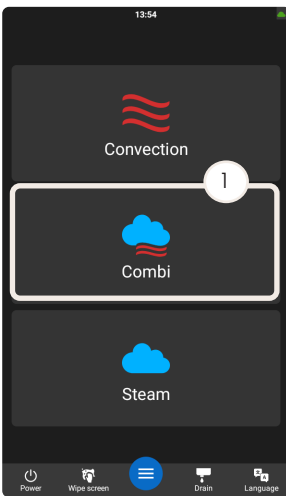


Setting CombiSpeed

The CombiSpeed function allows you to set an oven temperature and select a humidity level. This function is well-suited for braised products and poultry. The CombiSpeed function minimises shrinkage and improves the appearance and flavour of the products. You can choose between ten different humidity levels.



To achieve the best result, do not load products until the oven has reached the set temperature.

1. Touch the combi icon.

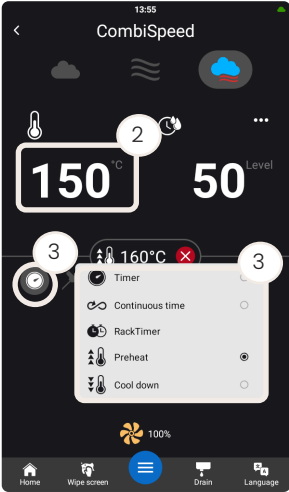


2. Set the temperature.
3. Touch the timer icon and set the time.
To change the mode, touch the more icon to select either "Timer", "Continuous time", "RackTimer", "Preheat" or "Cool down".
4. Touch the core probe icon, the oven starts in "Normal" mode.
To change the mode, touch the more icon to select either "Normal", "Delta-T" or "Cook & Hold".



This function is only available if the corresponding upgrade package is installed.

5. Touch the fan icon and set the fan speed.

Recommended humidity levels

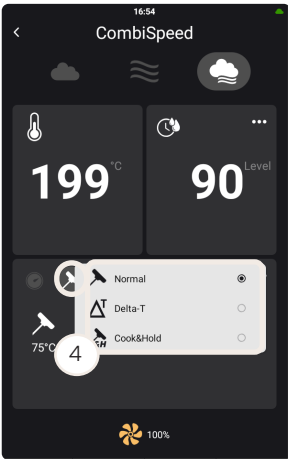



Product	Humidity level	Temperature [°C]
Roasting	30-40	170-190
Gravy production during braising of meat	70-80	145-165
Poaching fish, poultry and crispy vegetables	90-100	70-120
Steaming potatoes, rice, pasta, meat, etc.	100	100

Table 7



100°C with 100% humidity can be used as a steaming mode alternative.

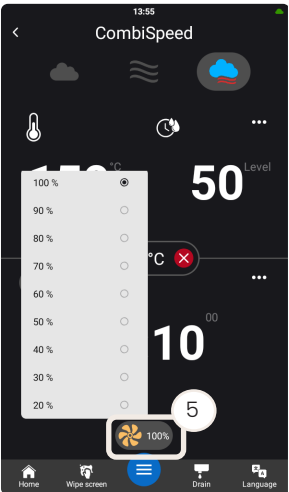

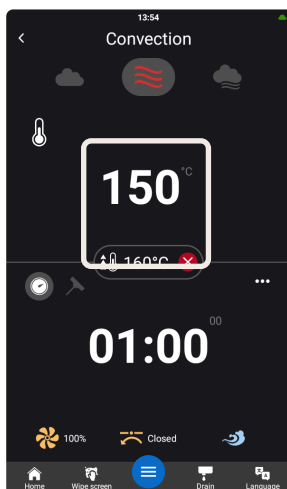

Automatic preheating the oven


The automatic preheat function ensures that the oven chamber is thoroughly heated before starting a cooking process. The function compensates for heat loss during opening and closing the oven, and it ensures consistent end results.



Set the preheating temperature to 10–20% above the desired temperature.



You can adjust the delta settings in the “Settings” menu. See section “Changing the CookTimeCorrection”

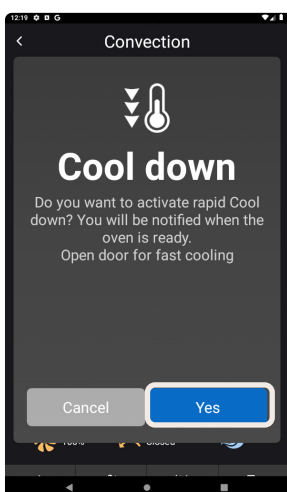


Automatic cooling down the oven

If you change the temperature significantly, for example from 200°C to 80°C, a pop-up menu will appear suggesting opening the oven door or prompt the oven to cool down. An alarm will sound when the temperature is reached.




For the best result, set the cool-down temperature to 20°C lower than the desired temperature of the next cooking function.

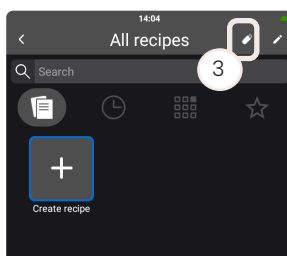


Using the Recipes menu

The oven can hold 500 recipes. Each recipe can hold up to 10 different steps. A set of preset recipes are installed on the oven from factory. These recipes are available in all languages accessible in the user interface.

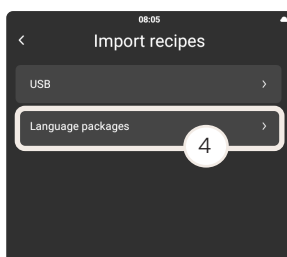


1. Touch the blue icon in the home screen menu.
2. Touch “Recipes”.
3. Touch the USB icon.
4. Touch “Import recipes”.
5. Touch “Language packages”.
6. Select the language package you want to import.

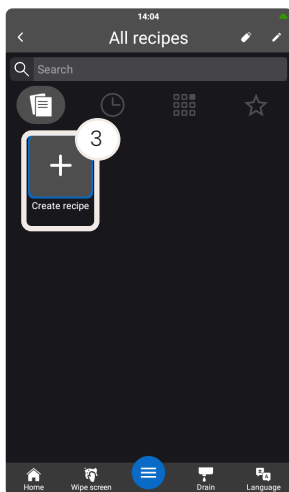


Creating a recipe

Creating the recipe content

1. Touch the blue icon in the home screen menu.
2. Touch "Recipes".
3. Touch "Create recipe".

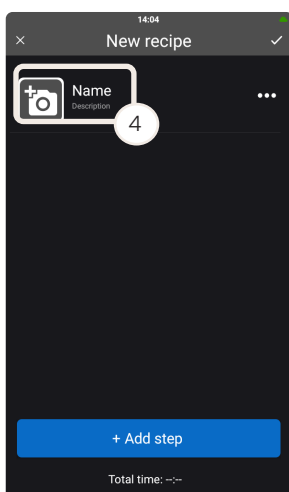

4. Touch "Name".

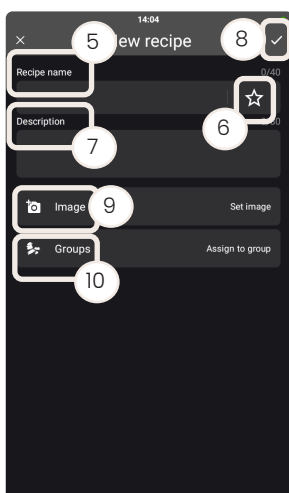


5. Enter the recipe name.
6. Touch the favourite icon to add the recipe to the favourites view.
7. Enter a description, if necessary.
8. Touch the done icon.
9. Touch "Image" if you want to add an image.




You can choose between a set of pre-installed colour photos and greyscale icons, or you can upload your own images via the USB connection.

For more information, see section "Importing an image via USB".

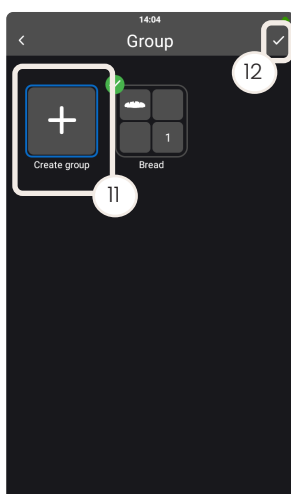

10. Touch "Groups" if you want to assign the recipe to a group of recipes.
11. Touch "Create group" to create a new group.
12. Enter the group name and touch the done icon.
If you already have a set of groups, select the group to which the recipe belongs.
13. Touch the done icon to save the recipe.

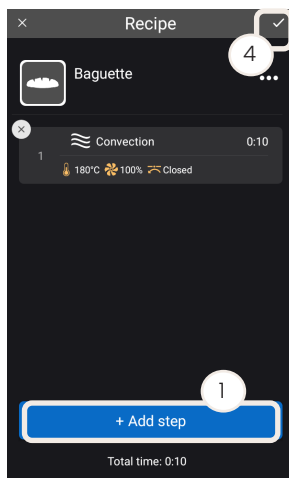

Creating the recipe step

After you have created the recipe and added the recipe details, do the following:

1. Touch "+ Add step".
2. Select the steps needed in the recipe.
3. Continue to add steps until you have created the recipe.



To ensure consistent cooking results, use "Preheat" as the first step and then "Note" as the next step to allocate time for inserting the product in the oven.





Use a "Note" step at any stage in the recipe program to create an alarm or to convey information to the user.



After preheating, the oven will maintain the temperature for ten minutes whilst you load the products.


4. Touch the done icon.

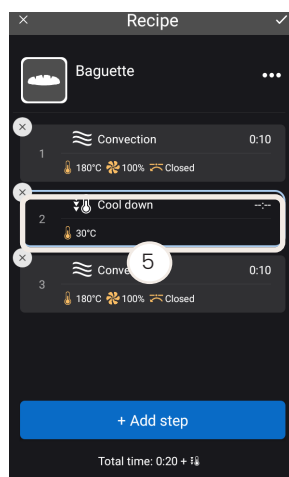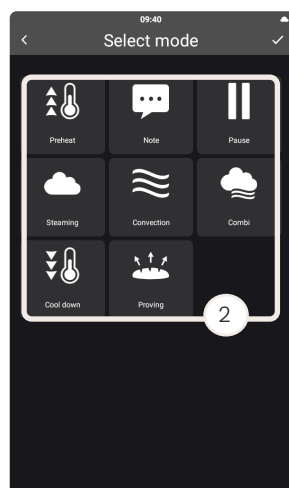

Moving a recipe step

You can change the order of the steps in a recipe.

1. Touch the blue icon in the home screen menu.
2. Touch "Recipes".
3. Select the recipe you want to change.
4. Touch the edit icon.
5. Press down and hold the step you want to move.
6. Move the step to the desired position.

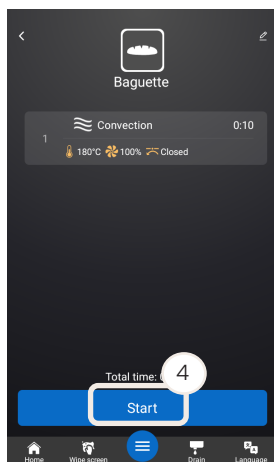


Using a recipe

1. Touch the blue icon in the home screen menu.
2. Touch "Recipes".
3. Touch the desired recipe.




An overview of the recipe details is displayed.

4. Touch "Start".

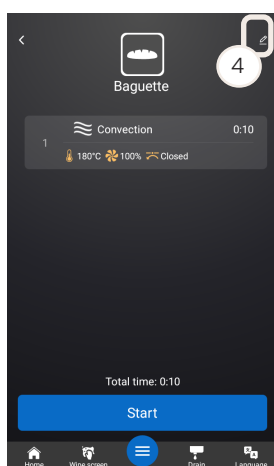


Editing a recipe

1. Touch the blue icon in the home screen menu.
2. Touch "Recipes".
3. Touch the desired recipe.
4. Touch the edit icon.
5. Make the necessary changes.
6. Touch the done icon.

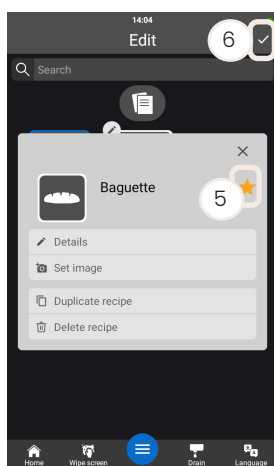

Adding an existing recipe to Favourites

1. Touch the blue icon in the home screen menu.
2. Touch "Recipes".
3. Touch the edit icon.
4. Touch the desired recipe.
5. Touch the favourite icon.
6. Touch the done icon.

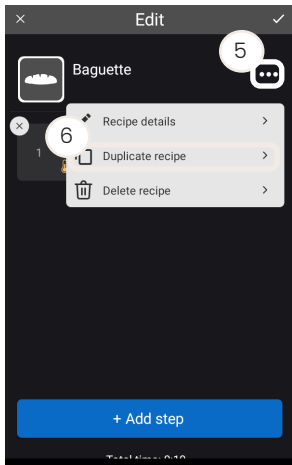


Duplicating a recipe

This feature is an easy way to create specific recipes with a similar content.


1. Touch the blue icon in the home screen menu.
2. Touch "Recipes".
3. Select the recipe you want to duplicate.
4. Touch the edit icon.
5. Touch the more icon.
6. Touch "Duplicate recipe".



You have a couple of seconds to undo your choice.

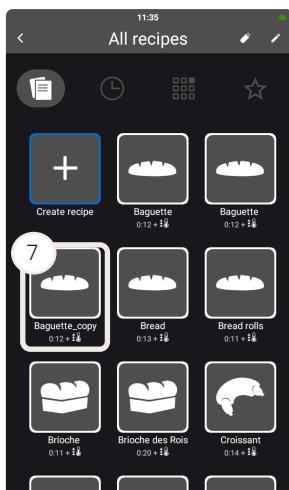

7. The recipe is duplicated and named "Recipe name_copy".
8. Change the name of the recipe.
9. Save the new recipe.

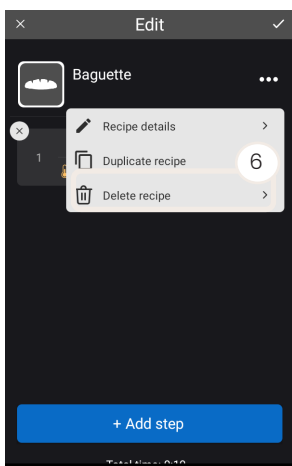



Deleting a recipe

1. Touch the blue icon in the home screen menu.
2. Touch "Recipes".
3. Select the recipe you want to delete.
4. Touch the edit icon.
5. Touch the more icon.
6. Touch "Delete recipe".



You have a couple of seconds to undo your choice (6).

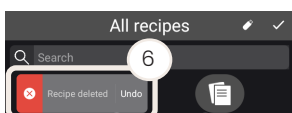

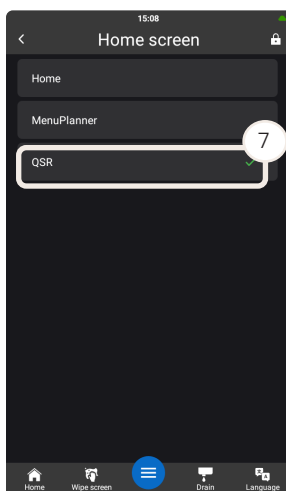


Setting QSR position

This function is only available if the corresponding upgrade package is installed.


Changing the startup profile to "QSR"

1. Make sure you are logged in as superuser.
2. Touch the blue icon in the home screen menu.
3. Touch "Settings".
4. Touch "General settings".
5. Touch "Startup and user profile".
6. Touch "Home screen".
7. Touch "QSR".

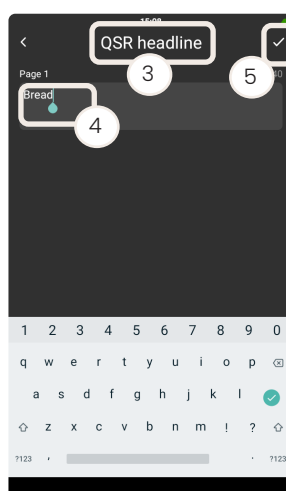

Naming of headlines on page

1. Set the startup profile to "QSR". See section "Changing the startup profile to "QSR"".
2. Touch "Edit".
3. Double-click on "QSR headline"
4. Enter the name of the page.
5. Touch "Done".

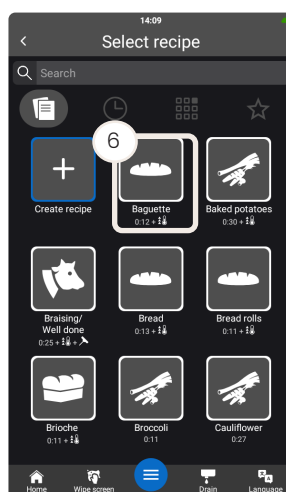


6. Touch "+" and add the relevant recipes.
7. Touch "Done".



Locking the home screen


You can lock the user permissions so that the user cannot edit the recipes and will have limited access to settings.

1. Touch the blue icon in the home screen menu.
2. Touch "Settings".
3. Touch the locked icon and make sure the oven is set to "Superuser".
4. Touch "OK".

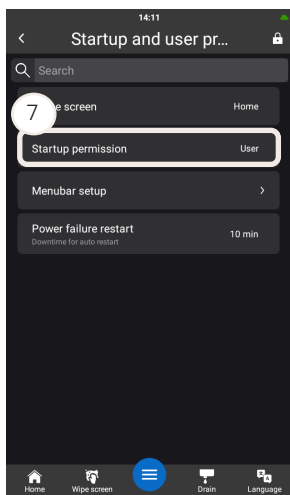


5. Touch "General settings".
6. Touch "Startup and user profile".
7. Touch "Startup permission".
8. Select "User".
9. Restart the oven.

To unlock the home screen, see "Changing user".

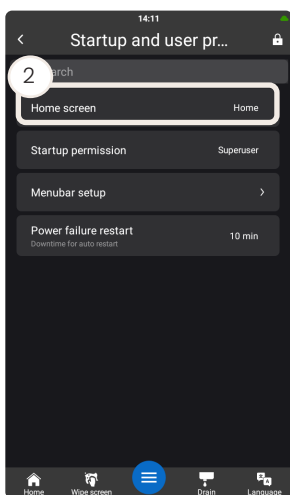

Disabling the QSR function



1. Change the user settings to "Superuser". See section "Changing user".
2. Change the startup profile to "Home" or one of the other settings. See section "Changing the startup profile to "QSR"".

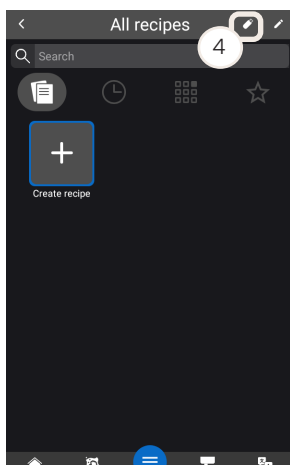

Using the USB function

The USB port (A) is placed on the right-hand side of the oven.


You can export and import settings, images, MenuPlanner recipes and recipes via the USB port and then transfer them to another Invoq oven. You can also import recipes from TOUCH-model ovens that have been produced from September 2012 to October 2022.

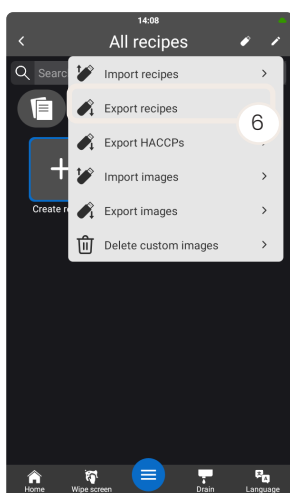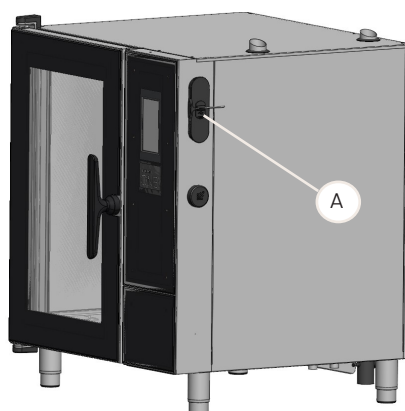


The oven will automatically create a folder on the USB stick named "Recipes". The downloaded recipe file will be stored in the folder as a .zip file containing recipes with standard icons or .zip files containing recipes and images.

Exporting a recipe

1. Remove the protective silicone plug from the USB port.
2. Insert a USB stick
3. Touch the blue icon in the home screen menu.
4. Touch "Recipes".
5. Touch USB icon.
6. Touch "Export recipes".
7. Select the recipes and/or QSR headlines that you want to export.
8. Touch the right icon.

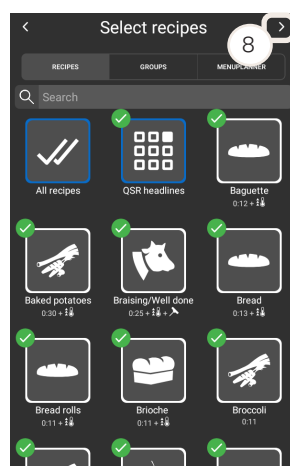

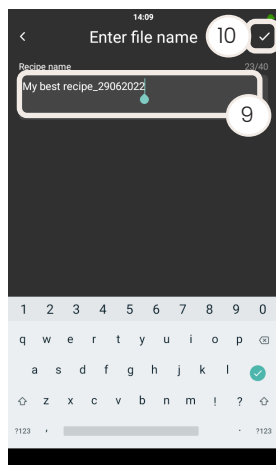


9. Enter the recipe file name.




We recommend that you name and date the file for easier navigation.

10. Touch the done icon.

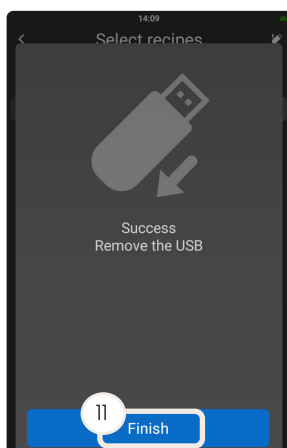


11. Touch "Finish".
12. Remove the USB stick.
13. Reinsert the protective silicone plug.

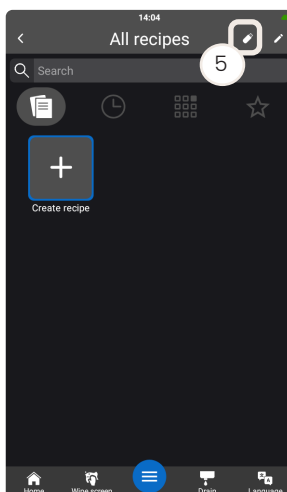

Importing a recipe

IMPORTANT! You can only upload files from a USB stick if the files are stored in a folder named Invoq and a subfolder named "Recipes".


1. Remove the protective silicone plug from the USB port.
2. Insert a USB stick
3. Touch the blue icon in the home screen menu.
4. Touch "Recipes".
5. Touch the USB icon.

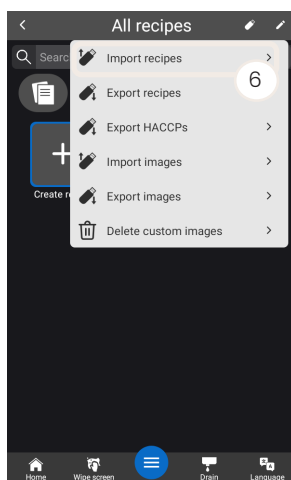

6. Touch "Import recipes".




7. Touch the file you want to import.

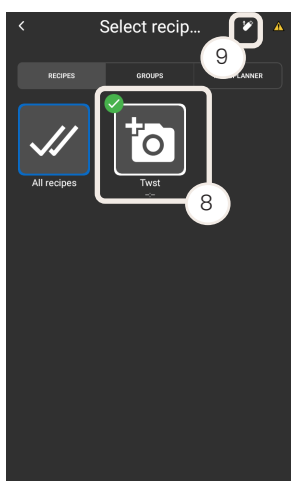


8. Select the recipes, groups and/or MenuPlanner you want to import.


9. Touch the "Upload" icon to import the selected items.

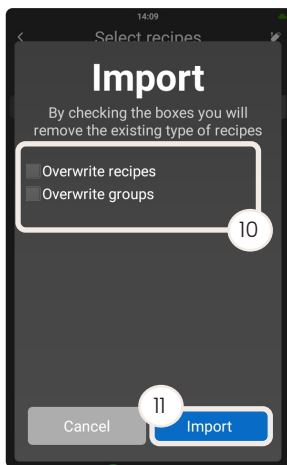

10. Check the box for the items you want to replace – recipes, groups and/or MenuPlanner.
11. Touch “Import”.

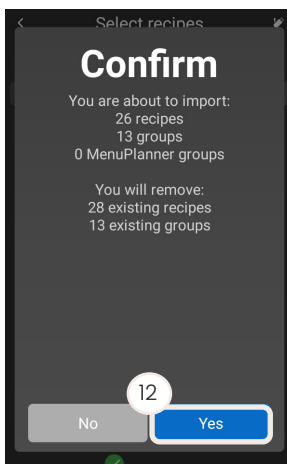

12. Touch “Yes” to confirm your selection of what to import.
13. Remove the USB stick.
14. Reinsert the protective silicone plug.

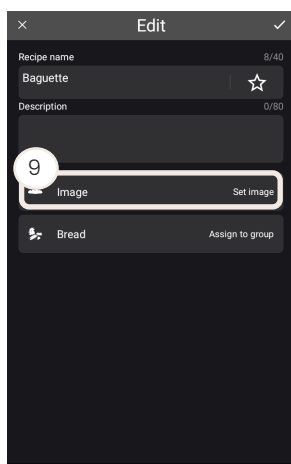


Importing an image via USB


1. Remove the protect silicone plug from the USB port.
2. Insert a USB stick.
3. Touch the blue icon in the home screen menu.
4. Touch "Recipes".
5. Touch the recipe to which you want to add the image.
6. Touch the edit icon.
7. Touch the more icon.
8. Touch "Recipe details".
9. Touch "Set image".
10. Touch "USB stick" and select the relevant image.

Make sure that the images are saved in the "Invoq\CustomImages" folder on the USB stick.

IMPORTANT!

For more information about how to set the correct folder structure on the USB stick, see section "Verifying the USB stick" in the service manual.

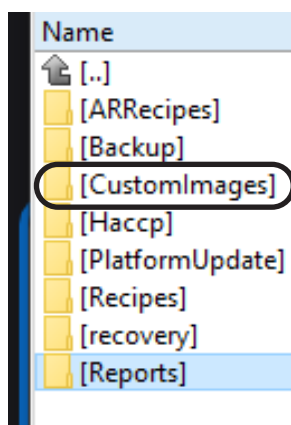


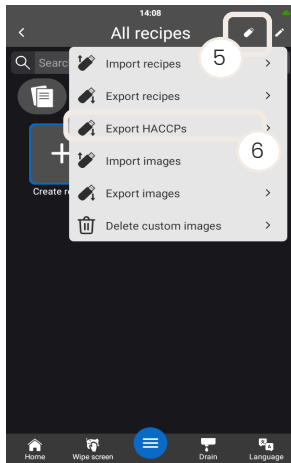

Using the HACCP function


The oven automatically records HACCP files each time a recipe, SmartChef or CareCycle program is completed. These files are stored for 60 days and are available for download directly in PDF format.


1. Remove the protective silicone plug from the USB port.
2. Insert a USB stick.
3. Touch the blue icon in the home screen menu.
4. Touch "Recipes".
5. Touch the USB icon.
6. Touch "Export HACCPs".
7. Select a "From" and "To" date.
8. Touch the download icon in the upper right corner.
9. Touch "Finish".
10. Remove the USB stick.
11. Reinsert the protective silicone plug.

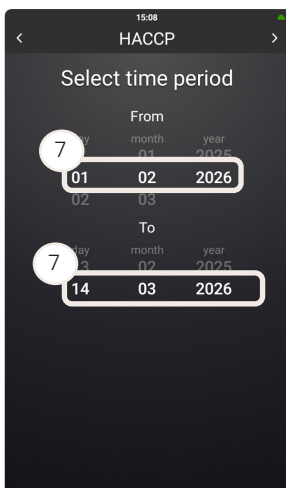

The oven automatically creates a folder on the USB stick named "Invoq". In the "Invoq" folder there is an "HACCP" folder in which the downloaded files are stored.

The HACCP files contain a graph showing the set and actual temperature for the oven cabinet and core probe. Temperatures are recorded every minute.

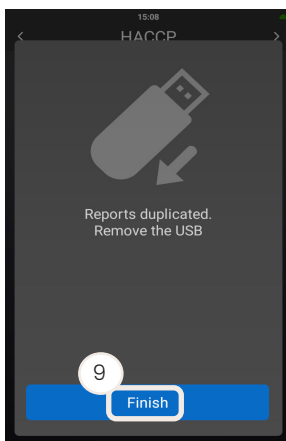

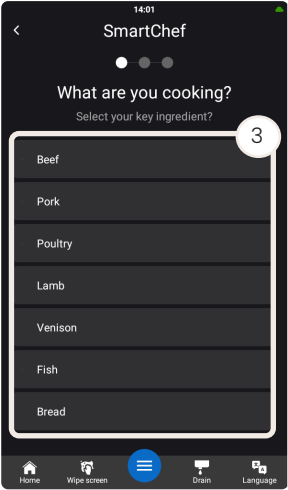


Using the SmartChef menu

This function is only available if the corresponding upgrade package is installed.

Use SmartChef for automatic cooking. This function provides a number of preset cooking function for a variety of products.

1. Touch the blue icon in the home screen menu
2. Touch "SmartChef" .
3. Touch the product type you want to cook.
4. Touch the cooking mode you want to use.
5. Adjust core temperature, colour, mode, size and speed, if necessary.
6. Touch the list icon to see the recipe.
7. Touch "Start".

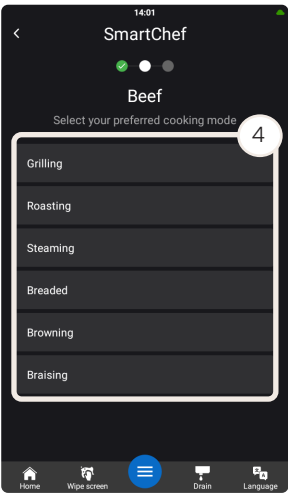

The oven starts preheating and sounds an alarm when ready.


8. Insert the core probe, if necessary and prompted.
9. Press "Confirm" after loading.


When SmartChef has finished cooking, you will be prompted to save the recipe as a favourite.

Cooking modes for meat

Product	Beef	Pork	Poultry	Lamb	Venison	Fish
"Grilling"	X	X	X	X	X	X
"Roasting"	X	X	X	X	X	X
"Steaming"	X	X	X	X	X	X
"Breaded"	X	X	X	X	X	X
"Browning"	X	X	X	X	X	
"Braised"	X	X	X	X	X	
"Crispy skin"		X				

Table 8

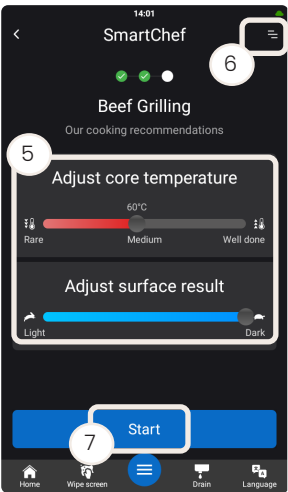

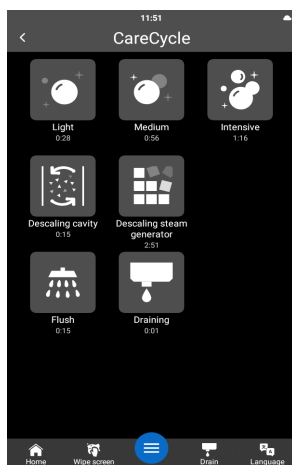

Using the CareCycle menu



CAUTION

Risk of skin irritation

- Use personal protective gloves to avoid direct contact with the CareCycle Clean and CareCycle Descale tabs.




CAUTION

Risk of chemical burns

- Never use the oven during automatic cleaning.



All wash cycle types are followed by a drying step, which you can skip in case you need to use the oven.

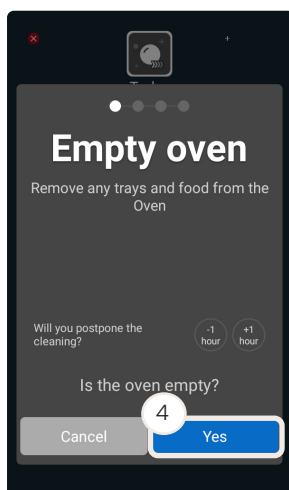

Starting a CareCycle wash


1. Touch the blue icon in the home screen menu.
2. Touch "CareCycle".
3. Select the type of wash you want use.
4. Make sure the oven is empty and touch "Yes".

IMPORTANT!


Do not open the door during wash to avoid disrupting the wash cycle.




This step allows you to postpone the cleaning

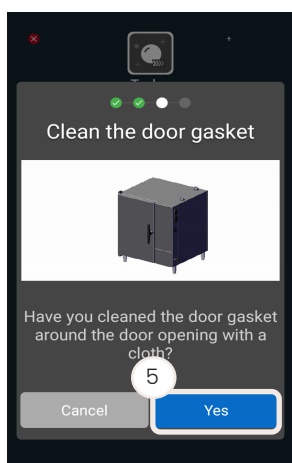


5. If necessary, clean the door gasket and touch "Yes".

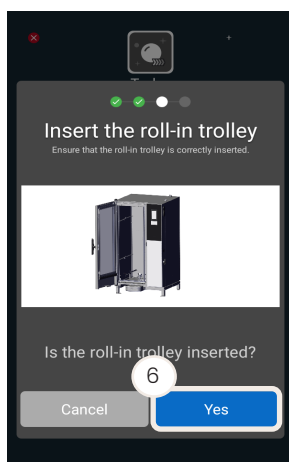


6. If it is a 20-1/1 oven, insert the roll-in trolley.

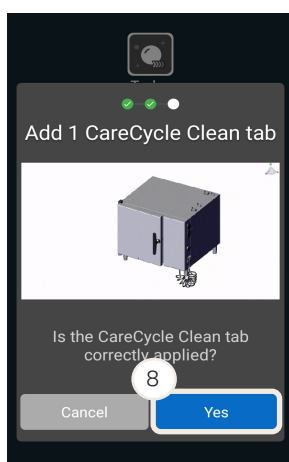

7. Place the number of CareCycle Clean tabs required for the specific wash cycle into the strainer.
8. Touch "Yes".
9. The wash cycle starts.

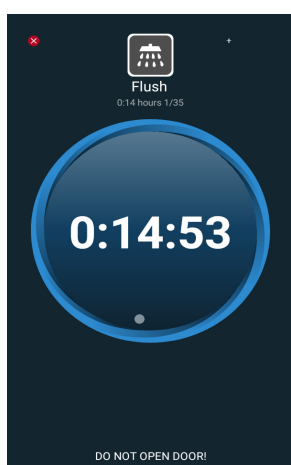


If the cleaning cycle is interrupted due to e.g. power cut or cancelation of a wash, the oven will start an automatic "Flush" wash to ensure that no chemical residues are left in the oven cavity.

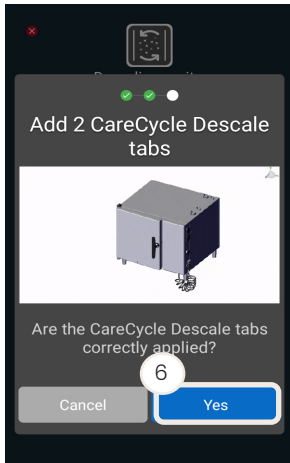

Descaling the oven cavity

1. Touch the blue icon in the home screen menu.
2. Touch "CareCycle".
3. Touch "Descaling cavity".
4. Make sure the oven is empty and touch "Yes".
5. Place the number of CareCycle Descale tabs required into the strainer.
6. Touch "Yes".
7. The descaling of the oven starts

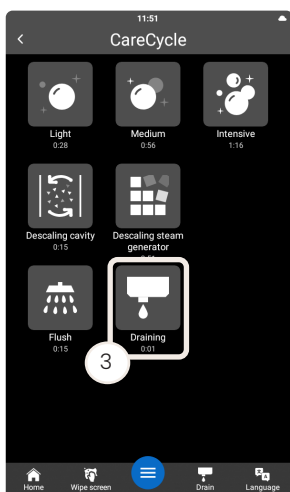


Draining the oven




The drain design makes it possible to empty the drain in cases where for example excess water from boiling pasta has been poured into the bottom of the oven. The feature can operate without conflicting with other use of the oven.

1. Touch the blue icon in the home screen menu.
2. Touch "CareCycle".
3. Push the "Draining" button.
4. Wait for the oven to finish the draining function.

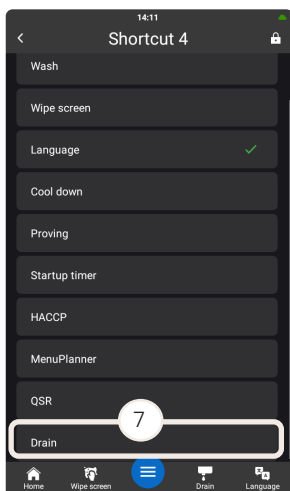

Adding the draining function to the menu bar

1. Touch the blue icon in the home screen menu.
2. Touch "Settings".
3. Touch "General settings".
4. Touch "Startup and user profile".
5. Touch "Menubar setup".
6. Select a short cut marked as "To be set".
7. Select "Drain".

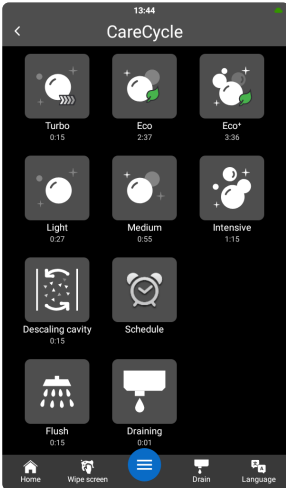


Types of wash cycles

Wash	Description
"Turbo"*	Quick cleaning cycle for use during the day.
"Eco"*	Greener version of the medium wash.
"Eco+"*	Greener version of the intensive wash
"Light"	Suitable for a lightly soiled oven.
"Medium"	Suitable for a moderately soiled oven.
"Intensive"	Suitable for a heavily soiled oven.
"Descaling cavity"	Removes limescale in the oven cavity and drain
"Schedule"*	Possibility to schedule up to two wash cycles a day
"Flush"	A short wash with no chemicals.
"Draining"	Empties the oven cavity and drain

Table 9

*These wash cycles are only available if the corresponding upgrade package is installed.

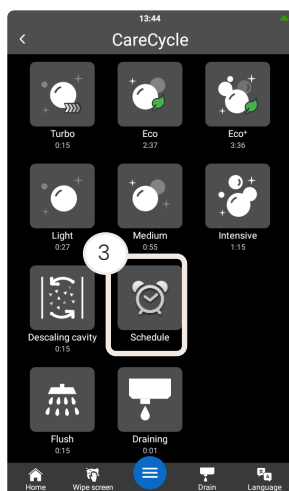


Scheduling a CareCycle wash




This function is only available if the corresponding upgrade package is installed.


IMPORTANT! You can schedule two CareCycle washes a day.

1. Touch the blue icon in the home screen menu.
2. Touch "CareCycle".
3. Touch "Schedule".

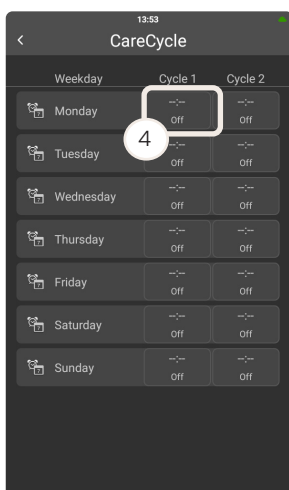

4. Touch "Cycle 1" on the day of the week that you want to schedule a wash cycle.
5. Select the time when to start the wash cycle.
6. If you want to be able to cancel a wash and have the oven continue cooking, tick the "Allow wash to be skipped" box.
7. Touch "Off".
8. Select wash cycle.
9. Touch "OK".

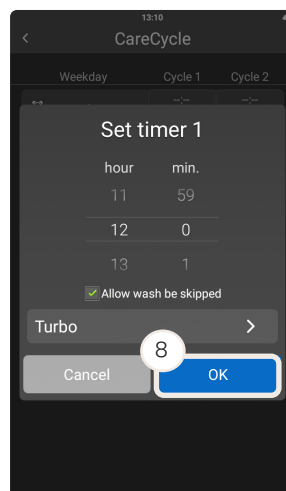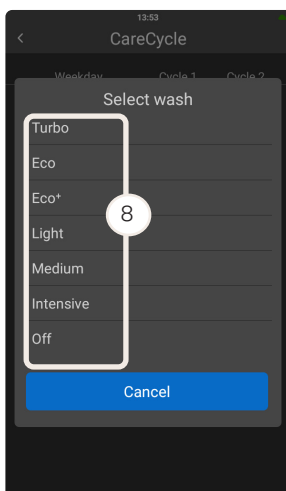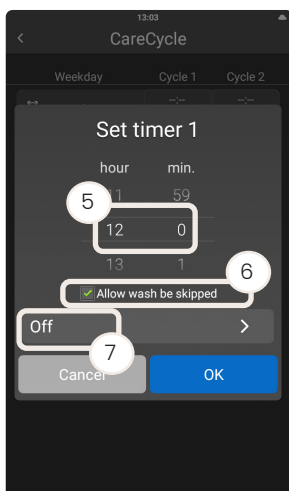

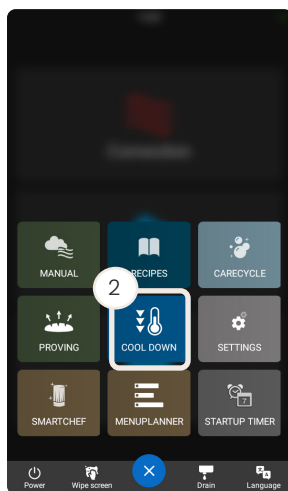


Cooling down the oven

Use the cool-down function if you want to cool down the oven chamber e.g. when changing from one cooking function to another.


1. Touch the blue icon in the home screen menu.
2. Touch "Cool down".
3. Touch the temperature display.
4. Drag your finger up and down the temperature wheel to set the temperature. Or touch and hold for two seconds on the display to use the keypad.






Open the door for faster cooling.

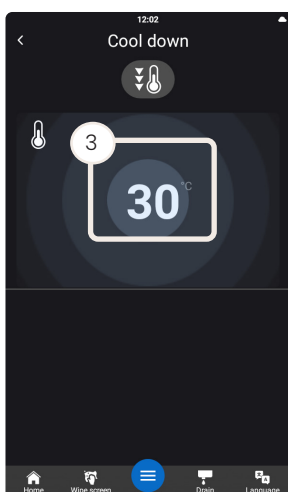

5. Touch "Exit" to finish cool down.

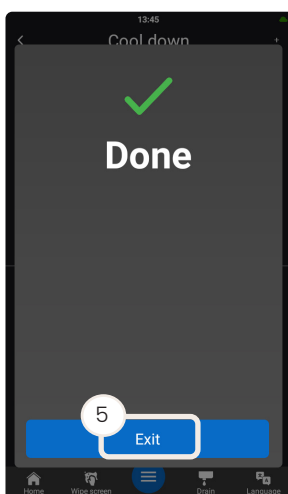

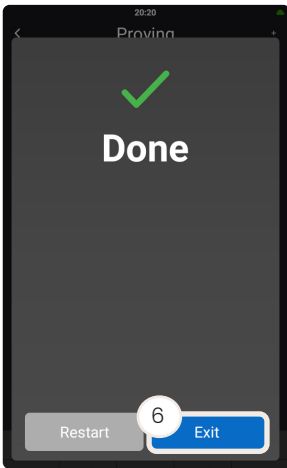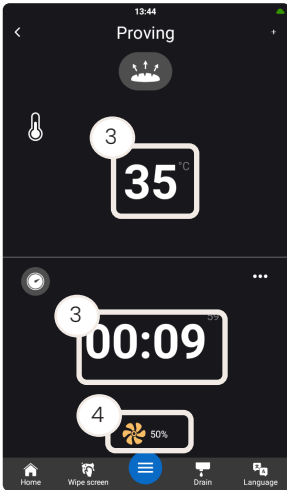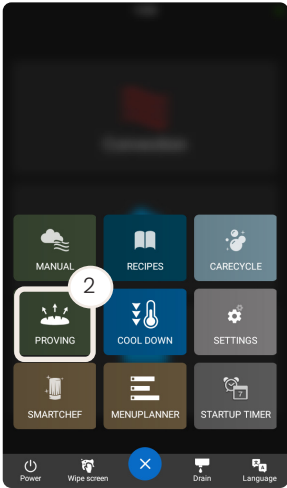

Using the proving function

Use the proving function for products that need proving before baking. Cool down the oven before proving.



Pre-baked products do not need proving. Pre-proved products require defrosting and baking.

1. Touch the blue icon in the home screen menu.
2. Touch “Proving”.
3. Set the temperature and the timer.
4. If you want to change the fan speed, touch the fan icon and set the fan speed.
5. The oven starts the proving function, and you can follow the progress on the display.
6. Touch “Exit”.


Recommended proving settings

Product	Temperature [°C]	Minutes [min]	Fan speed [%]
Loaves of 400-800 g	32	45	30-50
Rolls of 60-200 g	36	25	30-50
Baguettes of 60-200 g	36	25	30-50

Table 10



To ensure an optimal proving environment, we recommend a maximum fan speed of 50%.

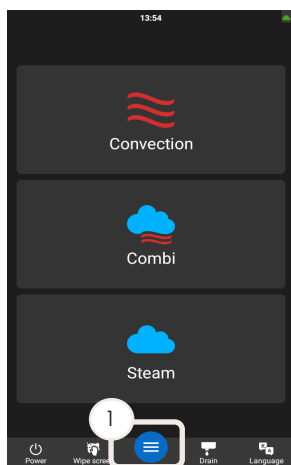

Using MenuPlanner


This function is only available if the corresponding upgrade package is installed.

The MenuPlanner function allows you to cook many different items at the same time. The integrated timers automatically notify you when to load and unload dishes from the oven ensuring precise and on time efficiency in the kitchen.

Before you start using MenuPlanner, make sure to have created menus which are compatible – menus that consist of recipes with the following characteristics:


- The recipes have the same cooking function such as convection heat and the same cooking parameters such as temperature and time.
- The recipes only include one step.
- The temperature in the recipes can fluctuate 10°C above or below the set temperature of the first chosen recipe in a menu.

MenuPlanner is available in these cooking modes: “Steaming”, “Convection” and “Combi”.

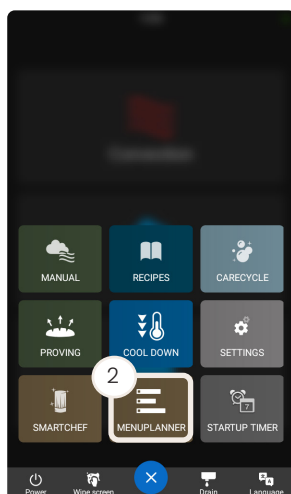


Accessing MenuPlanner

1. Touch the blue icon in the home screen menu.
2. Touch “MenuPlanner”.

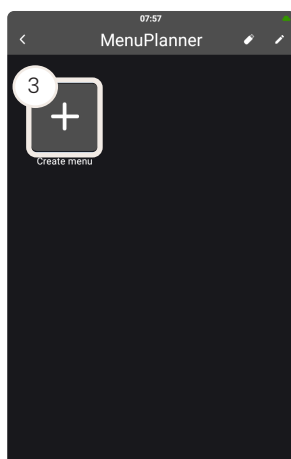

Creating a menu

1. Touch the blue icon in the home screen menu.
2. Touch “MenuPlanner”.
3. Touch “Create menu”.

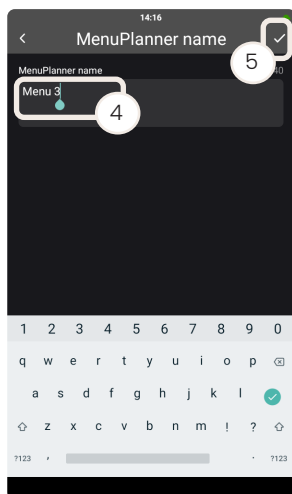


4. Touch "MenuPlanner name" and enter the name of the menu.



The maximum length of the name is 24 characters to ensure optimised user experience.


5. Touch the done icon.

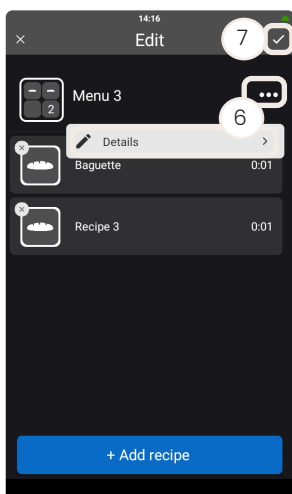

6. Touch the more icon and you can choose between:
 - MenuPlanner details
 - Duplicate
 - Delete
7. Select a function and touch the done icon.




The menus are displayed in alphabetic order.

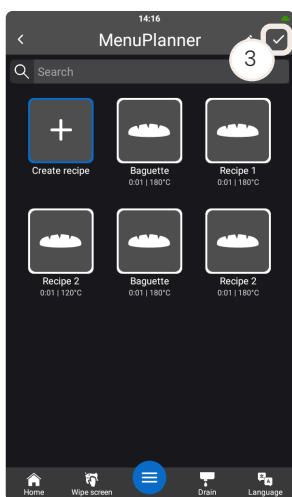


Editing a menu

1. Touch the blue icon in the home screen menu.
2. Touch "MenuPlanner".
3. Touch the edit icon.

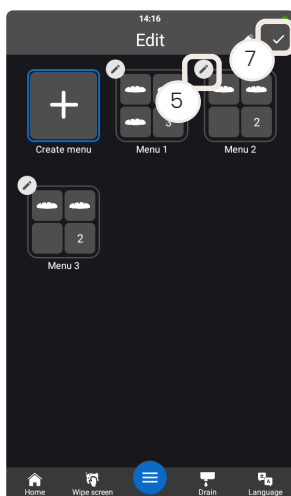


4. Touch the edit icon on the menu you want to edit.
5. Touch "Edit".
6. Make the necessary changes.
7. Touch the done icon.

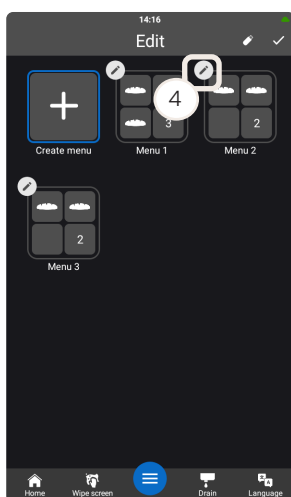


Duplicating a menu


1. Touch the blue icon in the home screen menu.
2. Touch "MenuPlanner".
3. Touch the edit icon.
4. Touch the edit icon on the menu you want to edit.

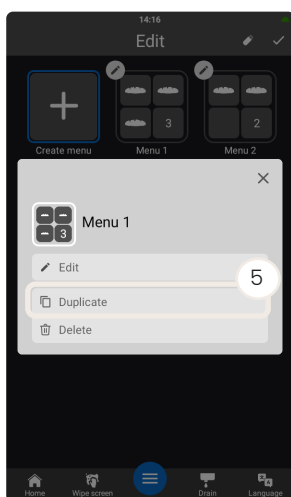

5. Touch "Duplicate".

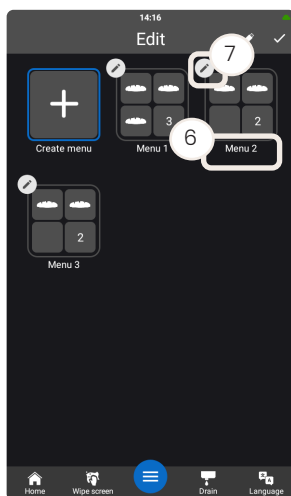


6. The menu is duplicated and named "Menu name_copy".
7. Touch the edit icon on the duplicated menu.
8. Touch "Edit".
9. Touch the name and change the name of the menu.
10. Touch the done icon.

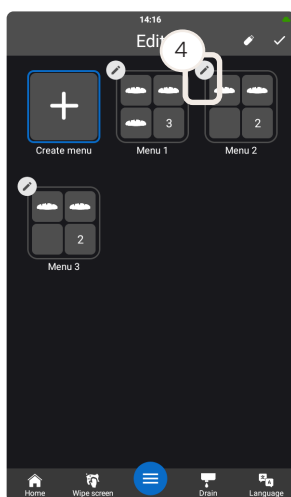


Deleting a menu

1. Touch the blue icon in the home screen menu.
2. Touch "MenuPlanner".
3. Touch the edit icon.
4. Touch the edit icon on the menu you want to delete.

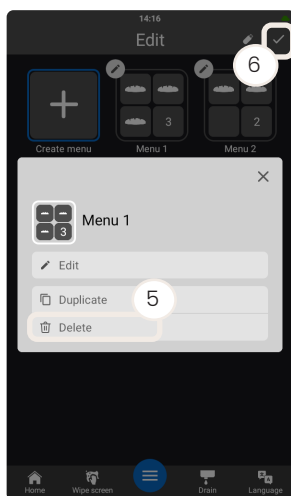


5. Touch "Delete".
6. Touch the done icon.

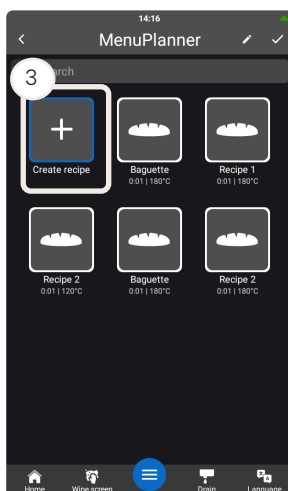


Creating a one-step recipe for MenuPlanner

1. Touch the blue icon in the home screen menu.
2. Touch "MenuPlanner".
3. Touch "Create menu" if you want to create a new menu with one-step recipes, or touch an existing menu to which you want to add a new one-step recipe.

For more information about creating a menu, see "Creating a menu".

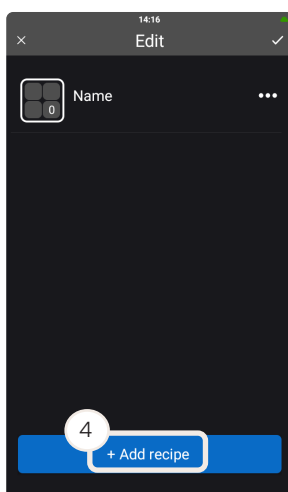


4. Touch "+Add recipe".

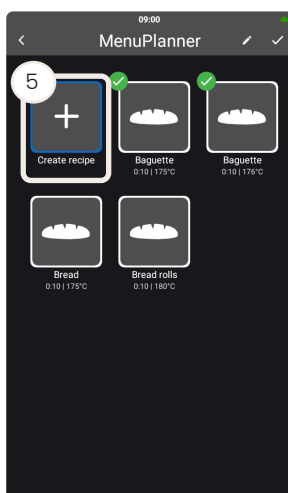


5. Touch "Create recipe".
For more information about editing an existing recipe, see "Editing a recipe".
6. Touch "Name" and enter the name of the recipe.




You can also add a description or an image.

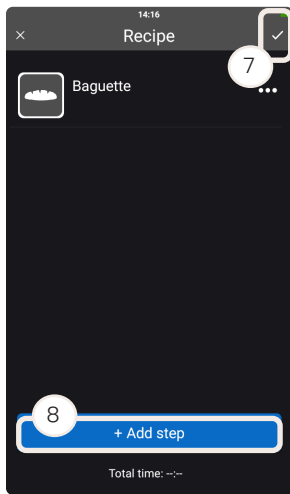


7. Touch the done icon.
8. Touch "+Add step".

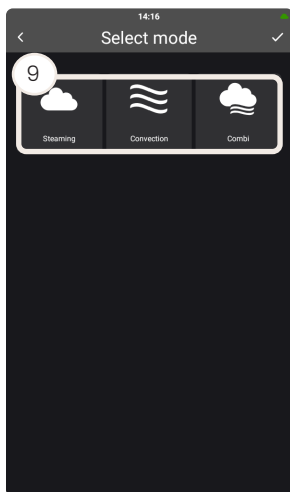

9. Touch the cooking mode – "Steaming", "Convection" or "Combi".

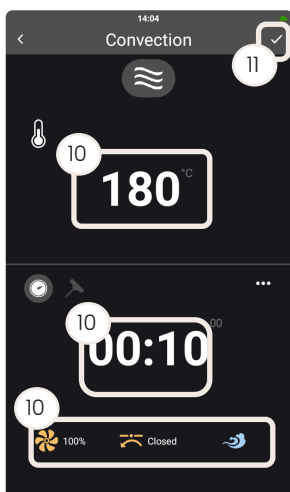


10. Select the cooking parameters such as temperature, time and fan speed.
11. Touch the done icon.

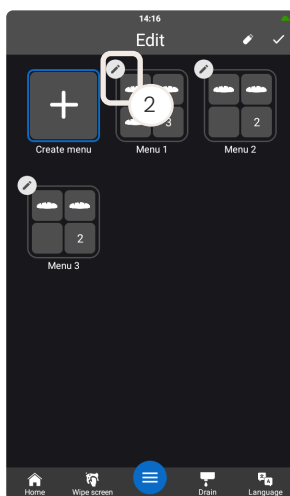


Allocating a recipe to a menu

1. Select the menu to which you want to add a recipe.
2. Touch the edit icon.

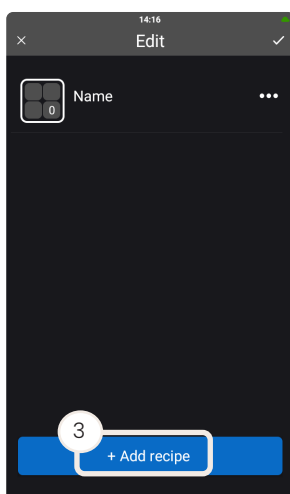

3. Touch "+Add recipe".

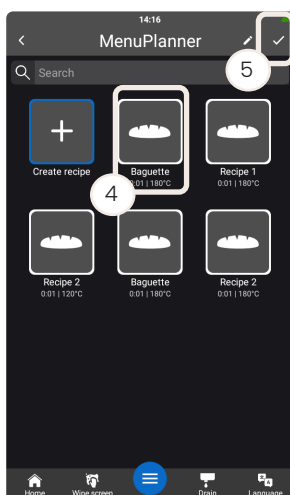


4. Select the recipes you want to add to the menu.



When you select a recipe, the recipes which are within the same delta are highlighted giving you an overview of the recipes you can add to a menu.

Make sure that there is a green check mark on all the recipes you want to add in your menu.

5. Touch the done icon.


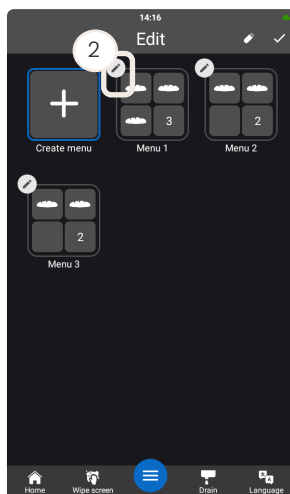


Changing cooking parameters


If you want to change an existing one-step recipe that is part of other menus, make sure to duplicate the recipe. Otherwise, you overwrite the recipe and risk that the delta of the recipe is changed so that the recipe no longer is part of the original menus.

IMPORTANT!

1. Select the menu and recipe to which you want to change the cooking parameters.
2. Touch the edit icon.
3. Touch the recipe.
4. Touch the recipe step.
5. Touch "Edit"

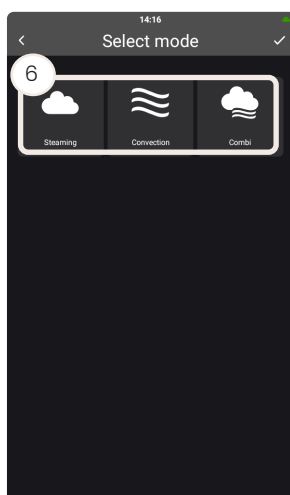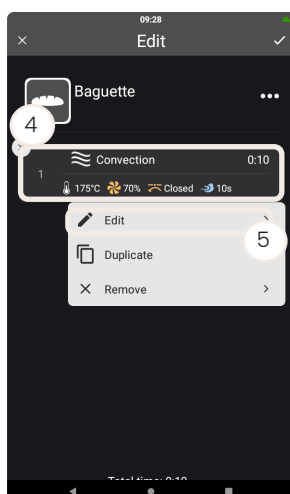

6. Select the desired cooking mode.

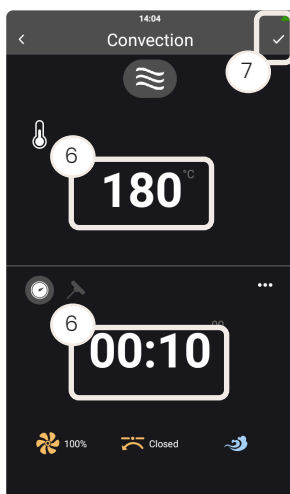


7. Select the desired cooking parameters such as temperature and time.
8. Touch the done icon.



Starting MenuPlanner

1. Touch the blue icon in the home screen menu.
2. Touch "MenuPlanner".
3. Touch the menu you want to start.

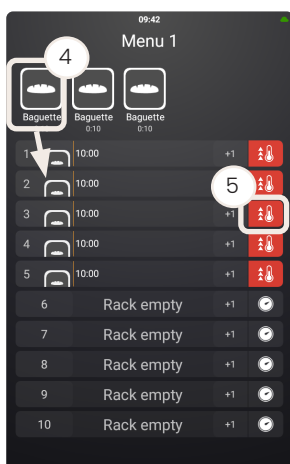

4. Hold your finger on the recipe you want to cook and drag it to the desired rack.



Instead of drag and drop, you can touch the rack and select up to three recipes to be added. Confirm by touching the rack again and a TablePlanner is created.




You can move one recipe from one rack to another by holding your finger on the recipe to move and drag it to the desired rack.




Opening and closing the door will start and clear racks.

5. The oven starts preheating.

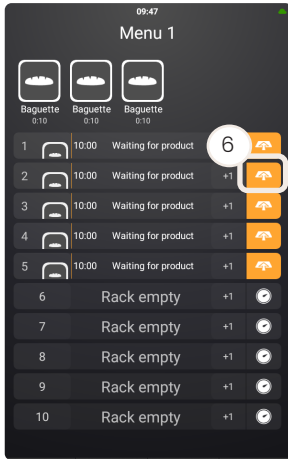

- Load the oven when the load oven symbol shows.

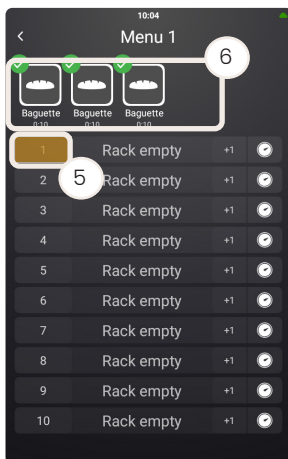


Using the TablePlanner function


The TablePlanner function allows you to combine up to three different products with one timer. Simply select your menu item; the oven will tell you when to load which item, and they will be ready for service at the same time.

- Touch the blue icon in the home screen menu.
- Touch "MenuPlanner".
- Touch the desired menu.
- Touch the desired rack number.
- Touch the recipes to be cooked together. You can add up to three recipes to be cooked together.
- Touch the rack number again and the TablePlanner icon shows.
- If the oven is not preheated, the oven starts preheating.
- Load the oven when the load oven icon shows. The oven will inform you which item to load first, second and third.



The CookTimeCorrection intelligence automatically compensates for temperature changes, e.g. when the door has been opened to add or remove products, ensuring perfect results every time.

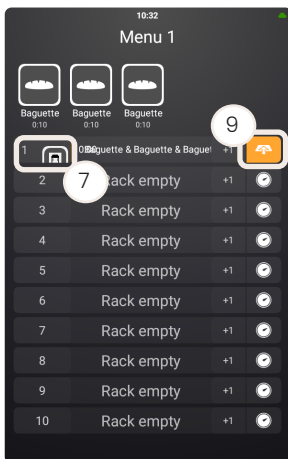

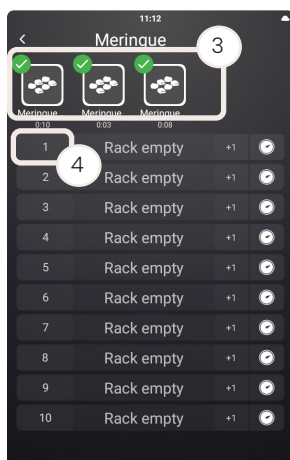



Using the RackPlanner function


The RackPlanner function allows you to combine up to ten recipes with one timer. Simply select your menu item; the oven will tell you when to load which item, and they will be ready for service at the same time.

1. Touch the blue icon in the home screen menu.
2. Touch "MenuPlanner".
3. Select a menu.
4. Select the desired recipes.
5. Touch the desired rack number.
6. If the oven is not preheated, the oven starts preheating.
7. Load the oven when the load oven icon shows. The oven will inform you which recipe and rack to load first, second, third, etc.
8. Remove the products when the empty oven icon shows.



The CookTimeCorrection intelligence automatically compensates for temperature changes, e.g. when the door has been opened to add or remove products, ensuring perfect results every time.

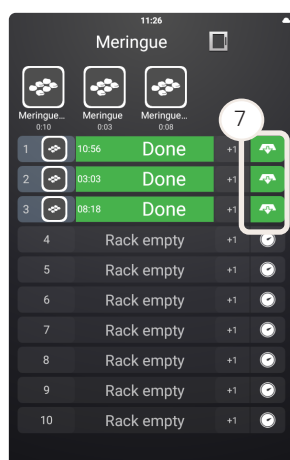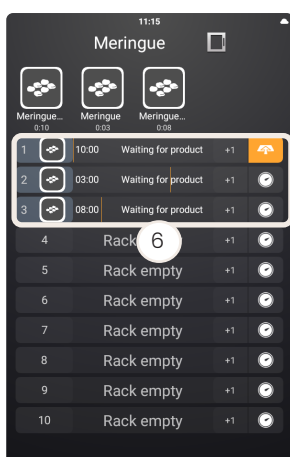

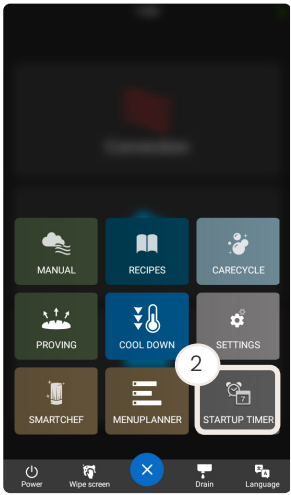

Using the Startup timer function

The Startup timer function automatically powers up and preheats the oven to be ready for a specific recipe.


Function	Description
"Single timer"	Starts a recipe at a selected time and date.
"Recurrent timer"	Starts a recipe at a selected time and date, and repeats it every week.

Table 11

1. Touch the blue icon in the home screen menu.
2. Touch "Startup timer".
3. Select whether you want to set a single timer or a recurrent timer.




4. If you select the single timer functions, define the time and date.

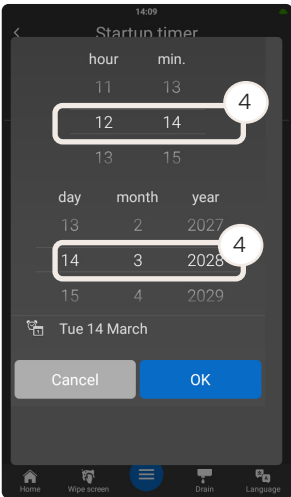





5. If you select the recurrent timer function, define the time and the day/days it should be repeated.
6. Touch "OK".

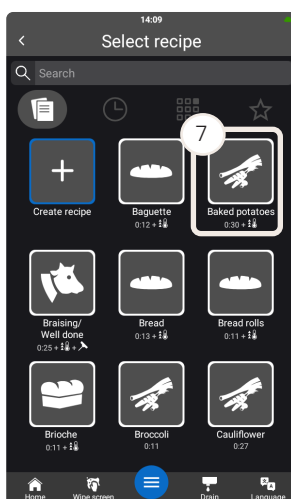

7. Touch the recipe you want to add to the "startup timer" function.

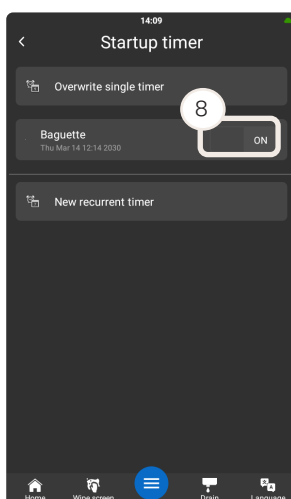


8. To deactivate a specific timer, slide the bar from "ON" to "OFF".

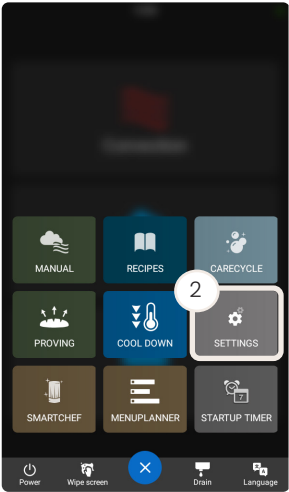

Using the Settings menu

- 1. Touch the blue icon in the home screen menu.
- 2. Touch "Settings".
- 3. The last used functions and settings are viewed.

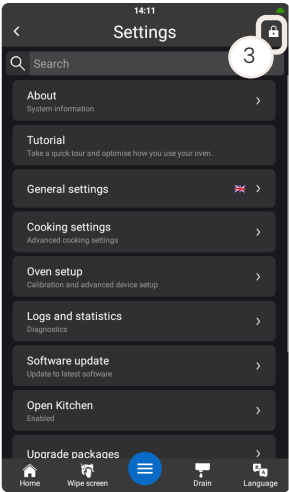


Changing user

Before you start the maintenance process or change settings, you must open the "Settings" menu.

- 1. Touch the blue icon in the home screen menu.
- 2. Touch "Settings".
- 3. Touch the locked icon in the upper right corner.
- 4. Touch the key icon.
- 5. Enter the code for the access rights needed.

User role	Access rights	Code
"User"	Access to the user menu	-
"Superuser"	Access to the user and superuser menu	876412

Table 12

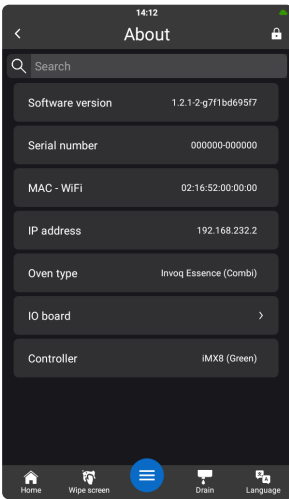


Finding the system information



The system information is important when you contact your local service partner in case of service or repair.


- 1. Touch the blue icon in the home screen menu.
- 2. Touch "Settings".
- 3. Touch "About".
- 4. In this view, you can see the software version, oven serial number and IP address.

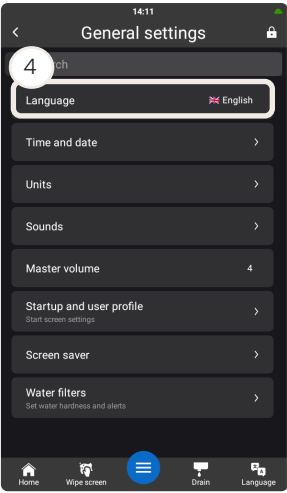

Changing the general settings

Changing language

1. Touch the blue icon in the home screen menu.
2. Touch "Settings".
3. Touch "General settings".
4. Touch "Language".
5. Touch the relevant language.

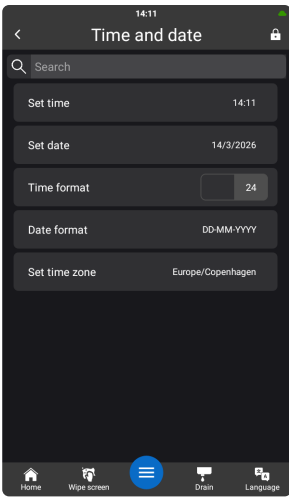


Changing the time and date

1. Touch the blue icon in the home screen menu.
2. Touch "Settings".
3. Touch "General settings".
4. Touch "Time and date".
5. Touch the relevant bar and make the necessary changes.

Value	Description
"Set time"	Set the hours and minutes.
"Set date"	Set the day month and years.
"Time format"	Toggle between a 12-hour or 24-hour time format.
"Date format"	Select between the DD-MM-YYYY and MM-DD-YYYY date format.
"Set time zone"	Select between the different time zones.

Table 13

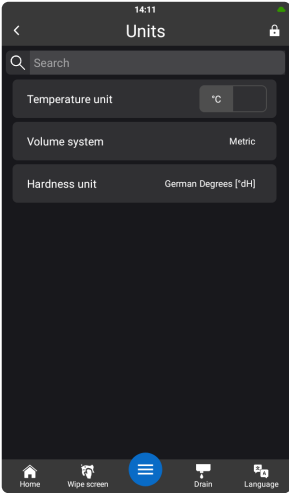


Changing units

- 1. Touch the blue icon in the home screen menu.
- 2. Touch “Settings”.
- 3. Touch “General settings”.
- 4. Touch “Units”.
- 5. Touch the relevant setting.

Value	Description
“Temperature unit”	Toggle between °C and °F.
“Volume system”	Select between metric and US system.
“Hardness unit”	Select between dH and ppm.

Table 14

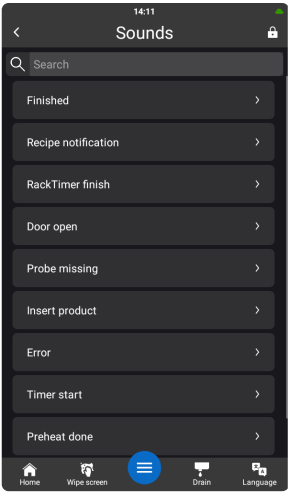

Changing sounds

- 1. Touch the blue icon in the home screen menu.
- 2. Touch “Settings”.
- 3. Touch “General settings”.
- 4. Touch “Sounds”.
- 5. Touch the action to which you want to change the sound.





You can always return to the default settings by touching the “Reset to default” button.

You can customise your sounds to indicate when to do something with your products in the oven, when to remove products from the oven, if a specific employee should do something, if it is the upper or lower oven, etc.

Value	Description
“Sound file”	Select the sound of the alarm.
“Repeat”	Define how often the alarm should be repeated.
“Volume”	Set the volume of the sound in %.
“Test sound”	Touch the button to perform an audio test of sound.


Table 15

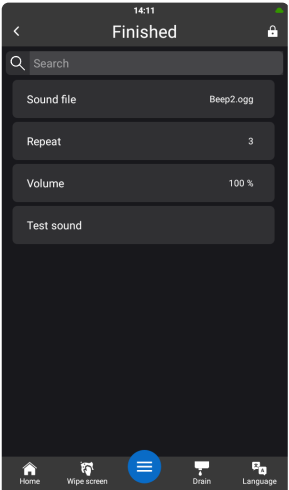

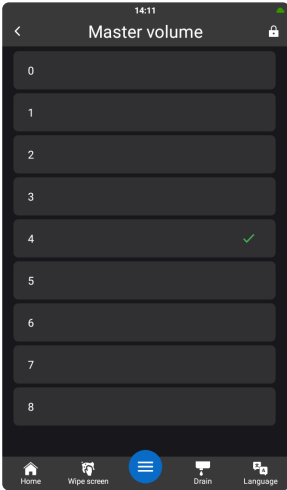

Changing master volume

- 1. Touch the blue icon in the home screen menu.
- 2. Touch “Settings”.
- 3. Touch “General settings”.
- 4. Touch “Master volume”.
- 5. Touch the relevant level of volume.

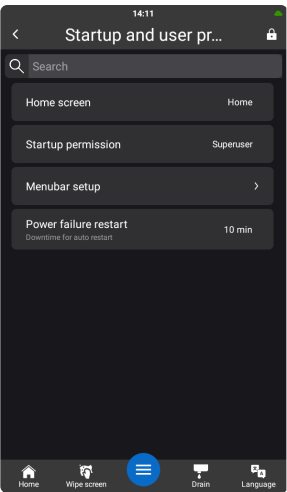




Changing the startup and user profile

- 1. Touch the blue icon in the home screen menu.
- 2. Touch “Settings”.
- 3. Touch “General settings”.
- 4. Touch “Startup and user profile”.
- 5. Make the relevant changes.

Value	Description
“Home screen”	Select your home screen. You can choose between: “Home”, “Favourites”, “Recipes”, “MenuPlanner”* and “QSR”*.
“Startup permission”	Select “Superuser” to have access to all general settings and editing. This is default. Select “User” to have limited access to general settings and editing.
“Menubar setup”	Create shortcuts from different functions to the menubar. You can select up to five shortcuts and choose between ten different features.
“Power failure restart”	Define when the oven should restart after power failure. You can choose between: no restart and after 10, 20 or 30 minutes.

Table 16

*These functions are only available if the corresponding upgrade package is installed.

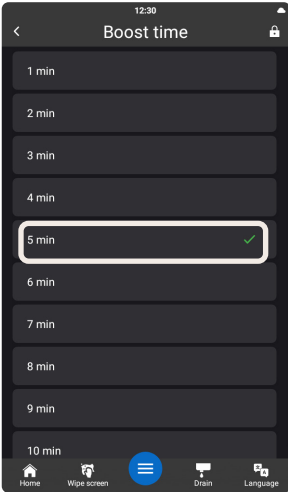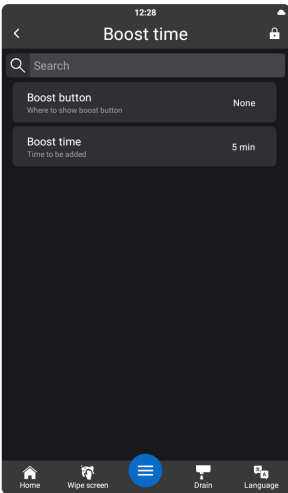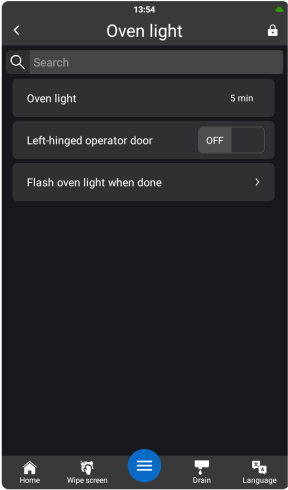

Changing the oven light

- 1. Touch the blue icon in the home screen menu.
- 2. Touch "Settings".
- 3. Touch "Oven setup".
- 4. Touch "Oven light".
- 5. Make the relevant changes.

Value	Description
"Oven light"	Define if the oven light should stay on continuously or for 5 minutes
"Left-hinged operator door"	Define whether the oven door is left-mounted or not.
"Flash oven light when done"	Define if the oven light should flash in one or more of the following situations: "Manual", "RackTimer", "Recipes", "SmartChef"* and "MenuPlanner"*..

Table 18


*These functions are only available if the corresponding upgrade package is installed.

Adding more time

- 1. Touch the blue icon in the home screen menu.
- 2. Touch "Settings".
- 3. Touch "Cooking settings".
- 4. Touch "Boost time".
- 5. Touch the amount of time to add.

Value	Description
"Boost button"	Define if and where you want to add the boost button. You can select between: "None" and "Operator display"..
"Boost time"	Define how much time you want to add to the cooking time. You can select between one minute and up to ten minutes in one-minute intervals. This function is only available on recipes. With this function, you can select "Finish" if your product is done, or you can add more cooking time.

Table 17

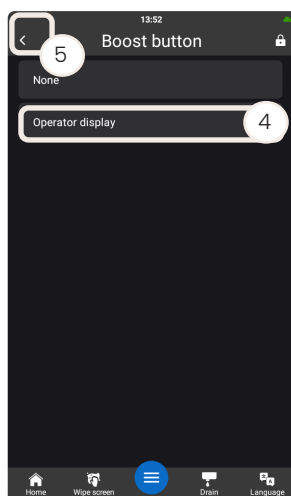

Using the boost button

The boost button gives you the possibility to add more time to the cooking time. You can select between 1-10 minutes.



1. Touch the blue icon in the home screen menu
2. Touch "Settings".
3. Touch the "Cooking settings".
4. Touch "Boost button".
5. Touch "Operator display".
6. Touch the back button.
7. Touch "Boost time"
8. Touch how much time to be added to the cooking time. The default setting is 5 minutes.
9. When the cooking time is done, push the boost button on the operator display or service display to add more time.




The boost button is only visible when running recipes. The time added is based on the settings from the last cooking step in the recipe.




Use the booster function when measuring the core temperature using an external core probe.

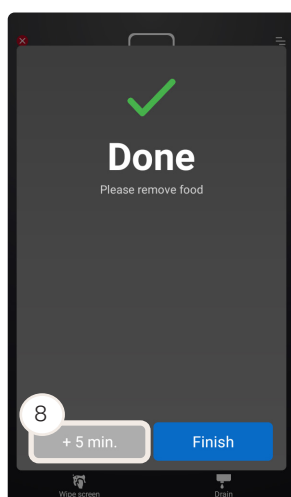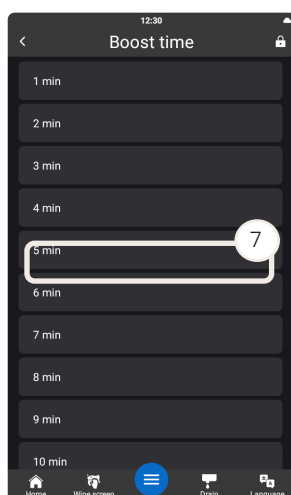

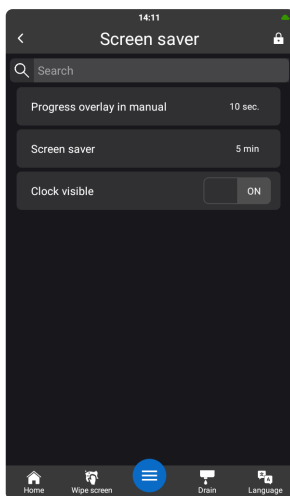

Changing the screen saver

1. Touch the blue icon in the home screen menu.
2. Touch "Settings".
3. Touch the "General settings".
4. Touch "Screen saver".
5. Touch either "Progress overlay in manual" or "Screen saver".
6. Select "Off" if you do not want the screen saver or overlay function, or select the relevant amount of time before the screen saver or the progress overlay is activated.

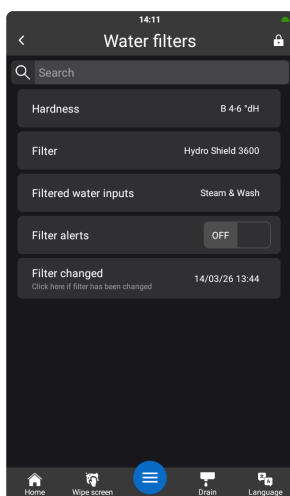

Setting the HydroShield water filter

When you have replaced the HydroShield water filter, you must update the HydroShield water filter settings according to the new HydroShield water filter.



We highly recommend that you use the water drop test to test the water hardness as this test is more precise and thus you get better utilisation of the HydroShield water filter.


See section “Testing the water hardness” in the installation manual.

1. Touch the blue icon in the home screen menu
2. Touch “Settings”.
3. Touch “General settings”.
4. Touch “Water filters”.
5. Make the relevant changes.

Value	Description
“Hardness”	Select the water hardness based on the result of the water hardness test. Use “Simple” mode if you use the water test strips or “Advanced” mode if you use the water drop test.
“Filter”	Select the HydroShield water filter size that you have installed.
“Filtered water inputs”	Select between “none”, “steam” and “steam & wash”.
“Filter alerts”	Toggle the filter alert on or off.
“Filter changed”	Touch “Filter changed” to reset the counters.

Table 19

For more information about how to mount the HydroShield water filter, see section “Replacing the HydroShield water filter”.

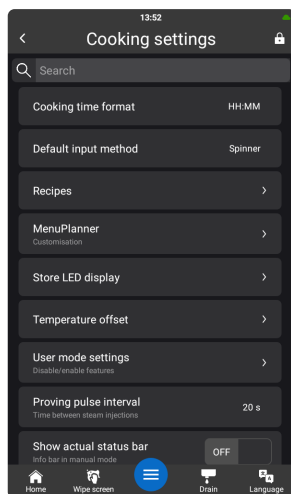


Changing the cooking settings

1. Touch the blue icon in the home screen menu.
2. Touch "Settings"..
3. Touch "Cooking settings".
4. Make the relevant changes.

Value	Description
"Default input method"	Select either the keypad or the spinner. Press and hold to choose the non-default input method.
"Recipes"	Set CookTimeCorrection and ValveOpeningTime.
"MenuPlanner"*	See section "Changing the MenuPlanner cooking settings".
"Store LED display"	Only active if an external store LED is available.
"User mode settings"	Toggle user mode settings on/off.
"Proving pulse interval"	Set the time between the steam injections.
"Show actual status bar"	Toggle the status bar on or off.
"Auto preheating"	Toggle automatic preheating on or off.
"Preheating offset"	Change the preheating offset.
"Cooldown auto enabled"	Toggle the function on or off.
"Cooldown offset"	Define the offset temperature.
"Cooldown start offset"	Define the start offset temeptrature.
"Boost time"	Show the boost button in recipes at the done dialog.

Table 20

*This function is only available if the corresponding upgrade package is installed.

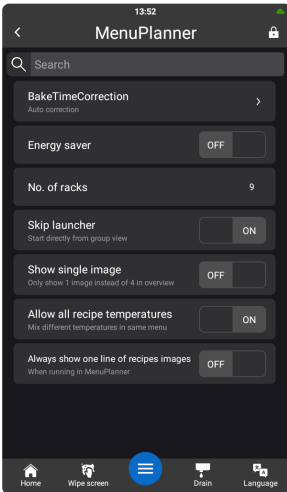


Changing the MenuPlanner cooking settings

This function is only available if the corresponding upgrade package is installed.

- 1. Touch the blue icon in the home screen menu.
- 2. Touch "Settings".
- 3. Touch "Cooking settings".
- 4. Touch "MenuPlanner".
- 5. Make the relevant changes.

Value	Description
"CookTimeCorrection"	See section "Changing the CookTimeCorrection"
"Energy saver"	Toggle the MenuPlanner energy saver on/off.
"No. of racks"	Set the number of racks.
"Skip launcher"	If "Skip launcher" is off, selecting a menu displays its recipes. If "Skip launcher" is on, the recipes are not shown.
"Show single image"	Only show one image instead of four in an overview. Toggle on/off.
"Allow all recipe temperatures"	Mix different temperatures in the same menu. Toggle on/off
"Only show one line of recipe images"	Show one line of recipe images. Toggle on/off.

Table 21

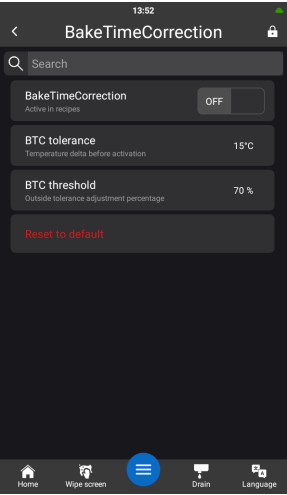

Changing the CookTimeCorrection settings

This function is only available if the corresponding upgrade package is installed.


- 1. Touch the blue icon in the home screen menu.
- 2. Touch "Settings".
- 3. Touch "Cooking settings".
- 4. Touch "MenuPlanner".
- 5. Touch "CookTimeCorrection".
- 6. Make the relevant changes.

Value	Description
"CookTimeCorrection"	Toggle the function on/off.
"CTC tolerance"	Set the temperature delta before action.
"CTC threshold"	Set the outside time adjustment percentage.

Table 22

Changing the oven setup


- 1. Touch the blue icon in the home screen menu.
- 2. Touch "Settings".
- 3. Touch "Oven setup".
- 4. Make the relevant changes.

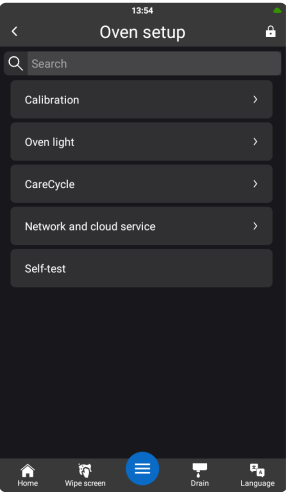

Value	Description
"Calibration"	You can calibrate the following from this menu: operator door and auto humidity*.
"Oven light"	You can define the time the oven light is on and if the oven light should flash after an action has ended.
"CareCycle"	Toggle the auto-dry oven and postpone buttons on/off and set the delime interval.
"Network and cloud service"	Set the WI-FI and network settings, share data and activate Open Kitchen.
"Self-test"	Run a self-test of the oven.

Table 23

*This function is only available if the corresponding upgrade package is installed.

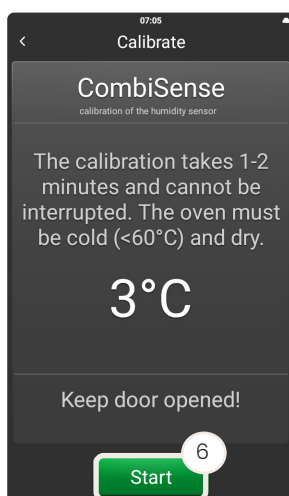

Calibrating the oxygen sensor

This function is only available if the corresponding upgrade package is installed.




The calibration of the oxygen sensor will take a few minutes and cannot be interrupted.

IMPORTANT!


The oven must be cold (below 60°C) and dry before calibration.

1. Touch the blue icon in the home screen menu.
2. Touch "Settings".
3. Touch "Oven setup"
4. Touch "Calibration".
5. Touch "Calibrate auto humid.".
6. Open the oven door.
7. Touch "Start".
8. Leave the door open during calibration.

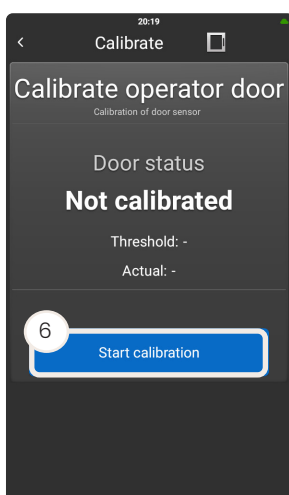

Calibrating the oven door


1. Close the operator door.
2. Touch the blue icon in the home screen menu.
3. Touch "Settings".
4. Touch "Oven setup"
5. Touch "Calibration".
6. Touch "Calibrate operator door".
7. Touch "Start calibration".
8. Follow the steps in the sequence guide on the display.

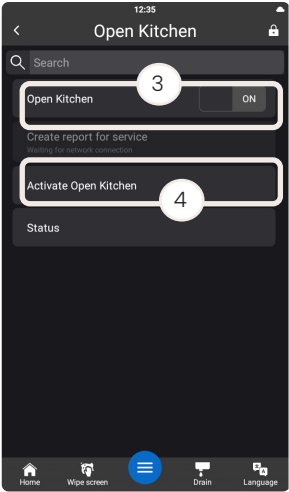

Activating Open Kitchen

Open Kitchen integrates connected kitchen appliances with energy and HVAC management systems. It uses advanced analytics to optimise equipment performance and operational efficiency.

- 1. Touch the blue icon in the home screen menu.
- 2. Touch "Settings".
- 3. Touch "Open Kitchen"
- 4. Set "Open Kitchen" to "On".
- 5. Touch "Activate Open Kitchen".
- 6. Scan the QR code and follow the instructions.

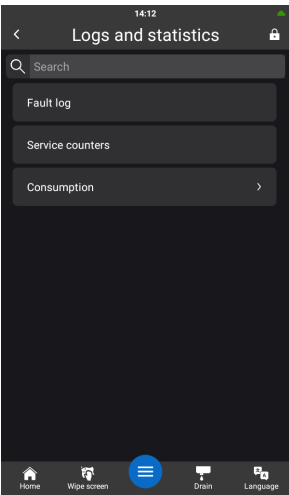


Monitoring logs and statistics

- 1. Touch the blue icon in the home screen menu.
- 2. Touch "Settings".
- 3. Touch "Logs and statistics".

Value	Description
"Fault log"	Overview of the latest active errors in a list with the most recent error on top.
"Service counters"	Overview of how often a component has been activated and for how long.
"Consumption"	Set the trip counter for the energy meter and the water meter.

Table 24

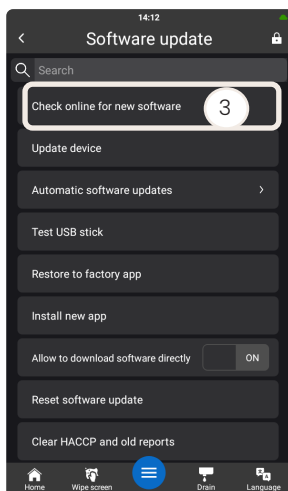


Updating the software

As Superuser and if the oven is online, you can check for new software and update the oven with the latest software.

1. Touch the blue icon in the home screen menu.
2. Go to "Settings".
3. Touch "Software update".
4. Touch "Check online for new software".

IMPORTANT!



If the oven is offline or a software version earlier than 0.7.59 is installed on the oven, contact your local service partner.

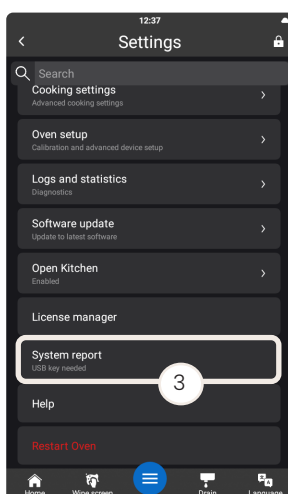

Creating a system report

1. Touch the blue icon in the home screen menu.
2. Touch "Settings".
3. Insert a USB stick.
4. Touch "System report".

A .zip file is downloaded to the USB stick. You can now send the file to your local service partner.

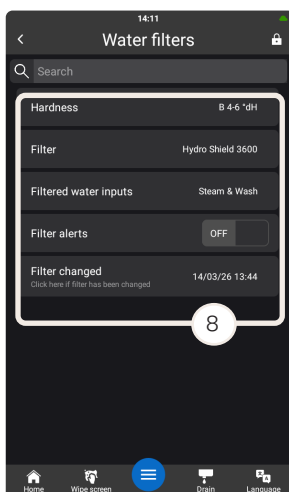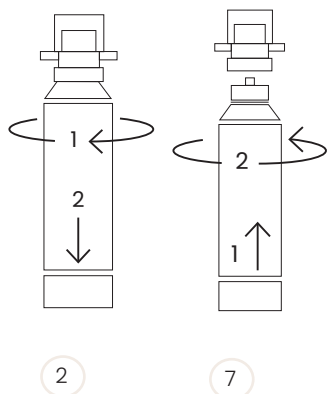

Replacing the HydroShield water filter

Always replace the HydroShield water filter:

- If the oven display shows the warning "Filter change needed".
 - On a regular basis and no later than 12 months after installation.
 - If the oven has not been used for four weeks or more.
- If you ignore replacing the filter, it will cause damage to the oven.

IMPORTANT!

The HydroShield water filter must always be installed in a vertical position with:

- The filter cap positioned upwards (facing the ceiling).
- The filter cartridge positioned downwards (facing the floor).

IMPORTANT!

It is the customer's responsibility to ensure that the water quality fulfil the requirements in section "Water requirements" in the installation manual. We recommend that you check the water quality regularly.

IMPORTANT!

1. Turn off the water supply.
2. Remove the HydroShield water filter by turning it clockwise.
3. Pull the HydroShield water filter out of the filter head.



CAUTION

Risk of slipping

- Be careful when you remove the used HydroShield water filter as it is heavy and filled with water.

4. Remove the new HydroShield water filter from the packaging.
5. Remove the hygiene cap.
6. Write the installation and replacement date on the filter.
7. Turn the HydroShield water filter anticlockwise in the filter head.
8. Reset the water filter. For more information, see section "Setting the HydroShield water filter".
9. Turn on the water supply.


Loading and unloading a roll-in trolley



DANGER

Risk of crushing

- Always use the parking brake on roll-in trolleys.

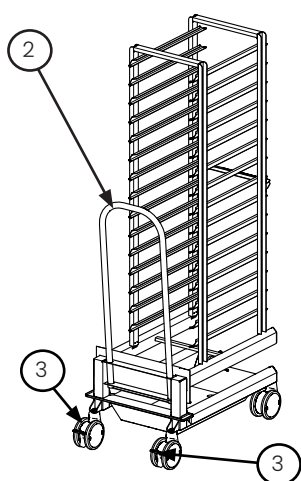


1. Open the oven door.



The door must be completely open to remove the trolley from the oven.

2. Insert the removable handle bar into the holes on the base.
3. Release the locks on the wheels and carefully pull the trolley out of the oven cabinet.
4. Replace the roll-in trolley.
5. Close the oven door.

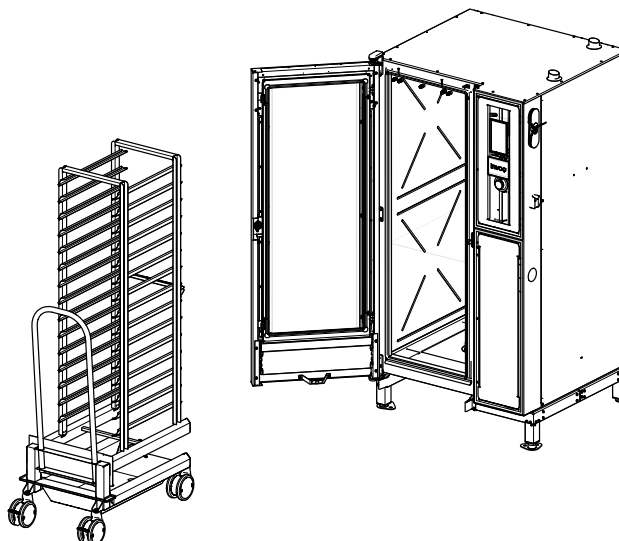



Using the core probe

This function is only available if the corresponding upgrade package is installed.

The core probe contains multiple temperature sensor points. The oven always operates from the coolest of the three sensors when cooking.

1. For the most accurate result, insert the entire length at the centre of the product.

IMPORTANT!

If a product is too small or thin, inaccuracy of cooking may occur.

IMPORTANT!

If the product has a fat cap, insert the core probe above the centre of the product and closer to the fat cap.



When roasting for example whole chickens, insert the pin into the thickest part of the breast.

2. If you use a sous-vide probe, apply foam tape before piercing the sous-vide bag and insert the entire length at the center of the product.
3. Space the trays evenly in the oven cabinet to ensure good airflow.



If you use one tray only, use the middle shelf.

Meats with larger amounts of connective tissue


Meat that contains larger amounts of connective tissue, such as shoulder, brisket and neck must be cooked at low temperatures to make them tender. The holding time should be 30-90 minutes at a core temperature of 60-75°C. The more tissue, the more important the holding time becomes.

Buffets and displays



Always follow local regulations.

Meat prepared for a buffet or sales counter display must have a core temperature above 75°C. Remove the meat after no longer than three hours or when the core temperature falls below 65°C.

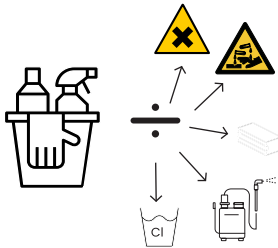

Cleaning the oven


We recommend that you clean the oven daily – both for hygienic reasons and to avoid interruptions of operation.



CAUTION

Risk of skin irritation

- Use personal protective equipment such as gloves to avoid direct contact with the CareCycle Clean and CareCycle Descale tabs.

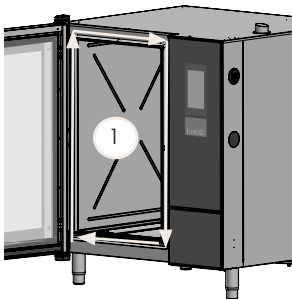


Cleaning the oven exterior

IMPORTANT!

Do not use a water hose, steam cleaner or high-pressure cleaner to clean the oven exterior as it may damage the oven.

IMPORTANT!

Use a regular non-corrosive, non-toxic and non-chloride kitchen cleaning detergent (similar to table cleaning) and a soft cloth to clean the oven exterior. Do not use brushes or sponges as this may cause scratches to the steel.

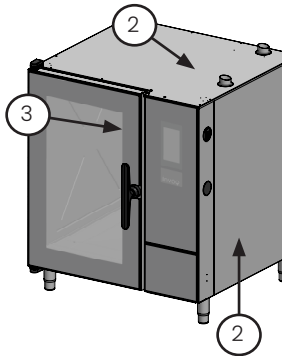

1. Clean the door sealing daily to keep the silicone clean and soft to ensure proper sealing.
2. Use a soft damp cloth and a liquid detergent to clean the oven exterior.
3. Clean the oven door and front using a window cleaner.
4. Treat the surface with steel oil.


Cleaning the codensation hood/Hoodini exterior

IMPORTANT!


Do not use a water hose, steam cleaner or high-pressure cleaner to clean the condensation hood exterior as it may damage the condensation hood/Hoodini.

IMPORTANT!

Use a regular non-corrosive, non-toxic and non-chloride kitchen cleaning detergent (similar to table cleaning) and a soft cloth to clean the condensation hood/Hoodini exterior. Do not use brushes or sponges as this may cause scratches to the steel.

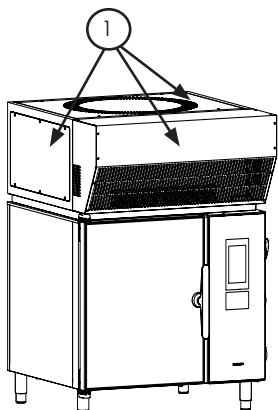

1. Use a soft damp cloth and a liquid detergent to clean the condensation hood/Hoodini exterior.
2. Treat the surface with steel oil.

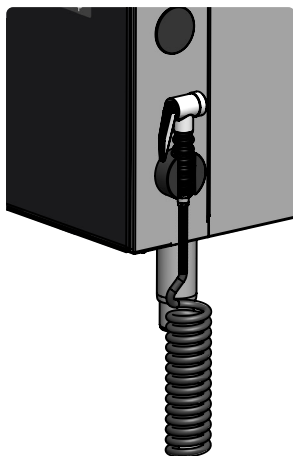

Using the hand shower

This function is only available if the corresponding upgrade package is installed.



DANGER


Risk of scalding

- Never spray water into the oven cavity when the oven temperature is above 100°C.

IMPORTANT! You can turn off the hand shower by the ball valve.

IMPORTANT! Never spray water into the oven cavity when the oven temperature is above 100°C.

Use the hand shower to wash down or flush away food remains from the oven cavity.


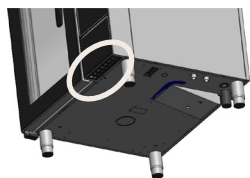


Cleaning the air intake filter



The filter is located below the control compartment.

- Clean the air intake filter when it is dirty or at least once a week. Otherwise, the controller and/or other electronical parts may overheat.
- Never use the oven without the air intake filter.

IMPORTANT!

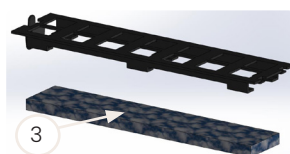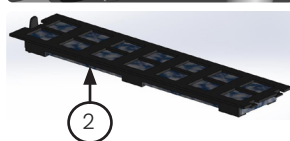

1. Push the snap.
2. Remove the complete air intake filter.
3. Slide out and remove the air filter.
4. Clean the air filter under running water or in the dishwasher. Replace it, if necessary.
5. Remount the air intake filter in reverse order.

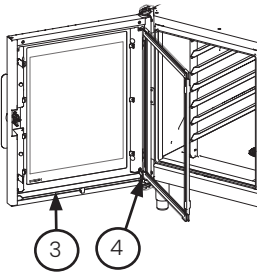
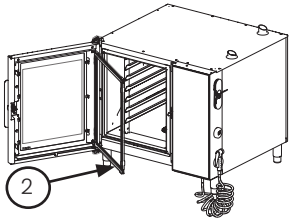


Cleaning the drip tray

The drip tray is located at the bottom of the inside of the oven door.

IMPORTANT! Clean the drip tray when it is dirty or at least once a week.

1. Open the oven door.
2. Release the inner glass.
3. Use a soapy water cloth to wipe clean the drip tray.
4. If the water outlet is clogged, use the hand shower to clean it.
5. Fasten the inner glass.
6. Close the oven door.

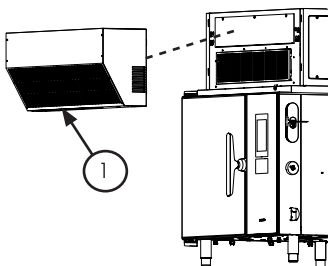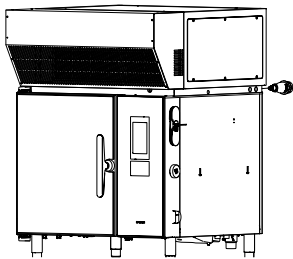

Cleaning the Hoodini filter


The filter is located on the front of the Hoodini.


IMPORTANT!

- Clean the Hoodini filter when it is dirty or at least once a week. Otherwise, the controller and/or other electrical parts may overheat.
- Never use the Hoodini without the Hoodini filter.

To clean the filter at the front of the Hoodini:

1. Remove the front of the Hoodini.
2. Remove the filter frame (A) and Hoodini filter (B).
3. Clean the filter under running water or in the dishwasher. Replace it, if necessary.
4. Remount the front of the Hoodini in reverse order.

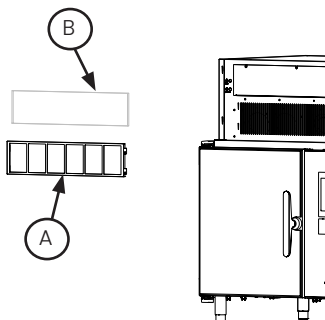


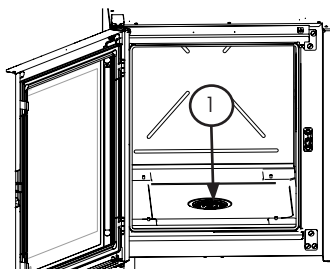

Cleaning the sieve

IMPORTANT! Clean the sieve daily

1. Remove the sieve from inside the oven
2. Clean the sieve either by hand or in the dishwasher
3. Put the sieve back in place.

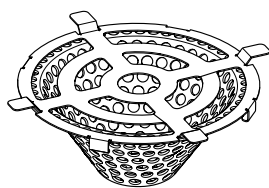

Regular maintenance and cleaning

Interval	Type of maintenance and cleaning
Daily	- Cleaning the oven exterior. See section "Cleaning the oven exterior". - Cleaning the sieve. See section "Cleaning the sieve"
Weekly	- Cleaning the air intake filter. See section "Cleaning the air intake filter". - Cleaning the drip tray. See section "Cleaning the drip tray".
Yearly	Replace the HydroShield water filter, if it has not been changed during the past year. See section "Replacing the HydroShield water filter".

Table 25

IMPORTANT!

We highly recommend that you follow the CareCycle guides on the oven.


Upgrading the oven

You can upgrade the oven with one or more of the following upgrade packages:


IMPORTANT! Some upgrade packages can be installed using a licence key only. Others require both a licence key and additional hardware installation performed by a technician.

Upgrade package	Description
Precision Cooking Package	Adds a multipoint core probe with Delta-T and Cook & Hold functions. Use the probe also with RackTimer for precise monitoring and consistent results.
Climate Package	Introduces a humidity sensor unlocking CombiSense, ClimateControl, and intelligent steaming for improved energy efficiency and cooking quality.
Intelligence Package	Combining the Precision and the Climate packages and further unlock SmartChef/ SmartBaker automation, MenuPlanner, and nine adjustable fan speeds for ultimate flexibility.
QSR Package	Activates Quick Select Recipes mode with a locked screen and customized user interface for streamlined quick-service operations.
Open Kitchen Package	Enables LAN connectivity with an Open Kitchen license for remote monitoring, recipe distribution, and data-driven management
Wi-Fi Package	Adds a Wi-Fi module with one year of Open Kitchen subscription and access to automatic software updates.
Handshower Package	Adds an ergonomic external handshower with a separate closing mechanism for flexible and easy cleaning


Table 26

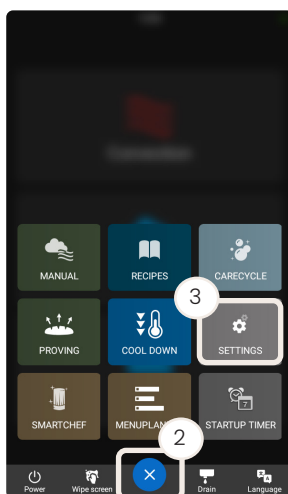

1. If no hardware installation is required, touch the blue icon in the home screen menu.
2. Touch "Settings".

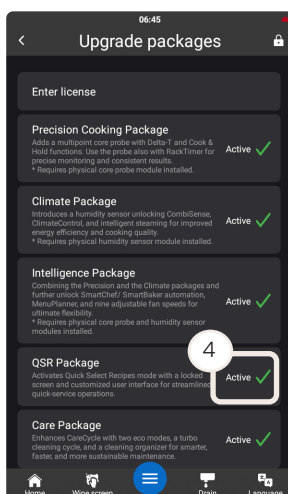

3. Touch "Upgrade packages".
4. Touch the relevant upgrade package.
5. Enter the license key and touch the arrow.

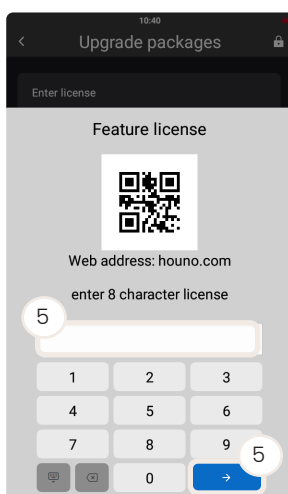

Technical data

Capacity

Capacity	6-1/1 GN	10-1/1 GN	20-1/1 GN
Capacity and tray sizes	1/1 GN; US sheet; 400x600 EN	1/1 GN; US sheet; 400x600 EN	1/1 GN; US sheet; 400x600 EN
Number of runners 70 mm distance	7 x 1/1 GN	10 x 1/1 GN	20 x 1/1 GN
Number of runners 85 mm distances	6 x 1/1 GN	8 x 1/1 GN	15 x 1/1 GN
Number of runners 80 mm distances	6 x 400x600 EN	9 x 400x600 EN	16 x 400x600 EN
Number of runners 95 mm distance	5 x 400x600 EN	8 x 400x600 EN	14 x 400x600 EN
Maximum food load per tray [kg]	4.5	4.5	4.5
Maximum food load per oven [kg]	31.5	45	90

Table 28

Core temperature guidelines for meat

Product	Temperature [°C]
Pieces of saddle, tenderloin or ham (lean)	60-65
Roast of saddle or ham	65
Pieces of meat that contain a large amount of connective tissue such as neck, brisket and shoulder	80
Pâté	75
Terrine	60
Rare roast	56-59
Medium roast	59-64
Well-done roast	65-70

Table 27

Core temperature guidelines for fish

Product	Temperature [°C]
Fish without bones	55
Fish with bones	60
Fish pâté	65

Table 29

Core temperature guidelines for Delta-T

Product	Temperature [°C]
Rare	52-57
Medium rare	59-62
Well done	72-87

Table 30

Disposing of the oven

The oven contains recyclable materials. Disposal of the oven or parts of it must happen in an environmental sound way according to the WEE regulation, Directive 2012/19/EU or local regulations for countries outside the EU.

Declaration of conformity

You find the declaration of conformity in the Asset Library at <https://invoqoven.com/en/login/>.

This page is intentionally left empty.



GET IN TOUCH.

As your oven specialist,
we always do our
utmost to help our
customers. Worldwide.

Lincat Limited
Whisby Road
Lincoln, LN6 3QZ
United Kingdom

T: +44 1522 875500
M: sales@lincat.co.uk

www.lincat.co.uk

Part of

