


# DIGITAL CONTROLLER PROGRAMMING INSTRUCTIONS

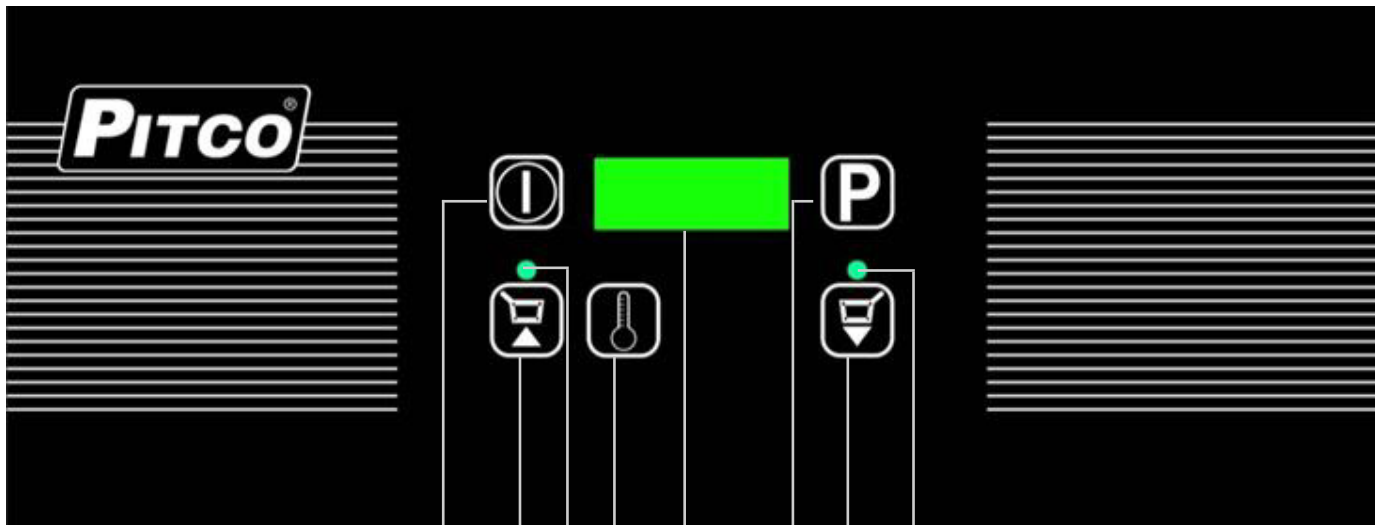

POWER ON/OFF  
LEFT TIMER KEY  
LEFT TIMER ON INDICATOR LIGHT  
TEMPERATURE KEY  
CONTROLLER DISPLAY  
PROGRAM KEY  
RIGHT TIMER KEY  
RIGHT TIMER INDICATOR LIGHT

## CONTROL FUNCTIONS



PRESS TO TURN CONTROLLER ON/HOLD FOR 3 SECONDS TO TURN CONTROLLER OFF



PRESS TO DISPLAY ACTUAL TEMPERATURE/PRESS TWICE TO DISPLAY SET TEMPERATURE.



PRESS TO START LEFT BASKET TIMER



PRESS TO START RIGHT BASKET TIMER



PRESS TO ENTER PROGRAMMING MODE



INDICATES PROGRAMMING MODE IS PASSWORD PROTECTED





# LOWER LEVEL PROGRAMMING INSTRUCTIONS

PROGRAMMING CAN NOT BE PERFORMED WHILE TIMERS ARE ACTIVATED

## STEP 1


Press **P** if the display **LoC** appears proceed to STEP 2, if the LEFT TIMER INDICATOR LIGHT turns ON and the CONTROLLER DISPLAY shows the left timer set time (time displayed is not counting down) you are in the PROGRAM MODE. Proceed to STEP 3

## STEP 2



With **LoC** showing on the display, press     to gain access to controller programming. NOTE: if the timer starts counting down, the password was not entered fast enough and the controller needs to be turned OFF and back ON, then repeat STEP 1

## PROGRAMMING CONTROLLER OPTIONS



## STEP 3

With the LEFT TIMER INDICATOR LIGHT illuminated and the CONTROLLER DISPLAY showing the left timer programmed cook time PRESS  or  to change programmed cook time of LEFT TIMER KEY.

## STEP 4



Press **P** to illuminate the RIGHT TIMER INDICATOR LIGHT and the display will show the set time for the RIGHT TIMER KEY. Press  or  to change programmed cook time of RIGHT TIMER KEY.

## STEP 5



Press **P** display will show the programmed SET TEMPERATURE. Press  or  to change programmed SET TEMPERATURE.

**TO SAVE AND EXIT PROGRAMMING PRESS AND HOLD **P** KEY FOR 5 SECONDS**

## STEP 6

Press **P** display will show **CP 5** , **CP L** or **CP 0** Press  or  to change programmed MELT setting.  
**CP 5** = Solid shortening melt cycle, **CP L** = Liquid shortening cycle  
**CP 0** = No melt cycle.

## STEP 7

Press **P** display will show **LoC** or **ULoC** RIGHT. Press  or  to change password protection ON or OFF.

## STEP 8

Press **P** display will show **C** or **F** (Celcius or Fahrenheit). Press  or  to change programmed TEMPERATURE scale.

## STEP 9

Press **P** to return to STEP 3 or back to the start of the programming loop.

**TO SAVE AND EXIT PROGRAMMING PRESS AND HOLD **P** KEY FOR 5 SECONDS**

# UPPER LEVEL PROGRAMMING INSTRUCTIONS

## STEP 1

## STEP 2

## STEP 3

Follow LOWER LEVEL PROGRAMMING INSTRUCTIONS STEP 1 and STEP 2

Press and HOLD **P**, While holding the **P** key down, Press key. Display will show *LIF 1* or *LIF 0* PRESS or to change the number of basket lifts operating on fryer.

**TO SAVE AND EXIT PROGRAMMING PRESS AND HOLD **P** KEY FOR 5 SECONDS**

Press **P** Display will show *t 0* or *t 1* Press or , to change the programmed setting. ( *t 0* = actual temperature display will only show when key is pressed, *t 1* = actual temperature will display at all times).

**TO SAVE AND EXIT PROGRAMMING PRESS AND HOLD **P** KEY FOR 5 SECONDS**

## CONTROLLER DISPLAY KEY



INDICATES A MELT CYCLE.



INDICATES FRYER TEMPERATURE IS LOWER THAN CONTROLLER SET TEMPERATURE AND IS HEATING.



INDICATES FRYER HAS REACHED CONTROLLER SET TEMPERATURE AND IS READY FOR COOKING



INDICATES HEATING SYSTEM IS ACTIVATED WHEN DOT IS LIT.