



Vegetable Hopper Assembly



Model #: _____

Serial #: _____

Instruction Manual for the Vegetable Hopper Assembly

For Service on Your Slicer:

1. Visit our website at www.globefoodequip.com
2. Or call the Globe Service Department at 937-299-8625 and ask for contact information for your local service company.

Visit our website for information on additional products available from Globe.

www.globefoodequip.com


Slicers, Mixers, Countertop Cooking Equipment, Meat Choppers & Scales

- IMPORTANT SAFETY NOTICE -

This manual contains important safety instructions that must be strictly followed when using this equipment.

WARRANTY REGISTRATION
SCAN THE QR CODE WITH YOUR MOBILE DEVICE OR GO TO
WWW.GLOBEFOODEQUIP.COM
TO FILL OUT AND SUBMIT YOUR WARRANTY REGISTRATION.

WWW.GLOBEFOODEQUIP.COM/SUPPORT/WARRANTY-REGISTRATION-FORM

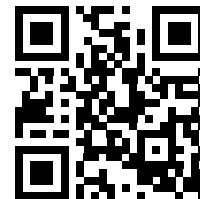

Index

INSTALLATION	4
OPERATION.....	5
DISASSEMBLY	6



GLOBE FOOD EQUIPMENT CO.
2153 DRYDEN RD.
DAYTON, OH 45439
Toll Free: 800-347-5423
PHONE: 937-299-5493
FAX: 937-299-8623
E-MAIL: info@globefoodequip.com
WEBSITE: www.globefoodequip.com

Installation

1. Hold end weight and unscrew end weight slide rod (Figure 4-1).



Figure 4-1.

2. Pull end weight slide rod out of end weight (Figure 4-2).
3. Remove end weight and end weight slide rod from food chute.

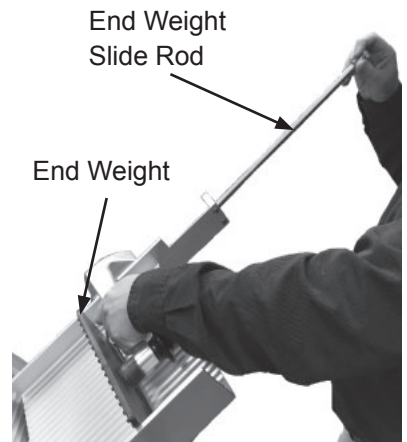


Figure 4-2.

4. Position vegetable hopper on food chute.
5. Tighten two knobs to secure vegetable hopper to food chute (Figure 4-3).

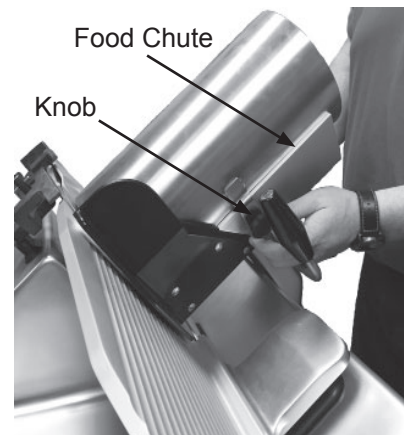


Figure 4-3.

Operation

WARNING



SHARP KNIFE BLADE

TO AVOID SERIOUS PERSONAL INJURY:

- **NEVER** touch rotating knife.
- **ALWAYS** keep hands clear of all moving parts.
- **NEVER** put hands/fingers into vegetable hopper during operation. **ONLY USE VEGETABLE HOPPER END WEIGHT ASSEMBLY** to push vegetables into vegetable hopper.

1. Put vegetables in vegetable hopper.
2. Put vegetable hopper end weight assembly in vegetable hopper (Figure 5-1).
3. Push START button to turn on knife motor.

Note: The green RUN indicator light will illuminate.



DO NOT hold the food product with your hand. Never put your hand on or around food chute when slicer is under power. The food chute handle is the only part of the slicer you should touch while slicing.

4. Use food chute handle to manually push food chute back and forth. The food chute handle is the only part of slicer you should touch while slicing. Do not catch slices with your hand. Let slices drop onto receiving area.



If a product needs to be adjusted during slicing, ALWAYS pull the food chute all the way towards you. Turn off slicer, and close slicer table prior to adjusting the product and the end weight.

5. After the last slice stroke, pull food chute all the way towards you. Push the STOP button to turn knife motor OFF.

Note: The green RUN indicator light will go out.

6. Turn slice thickness dial clockwise until it stops to close slicer table. Now you can unload and load food product from food chute.



Figure 5-1.

Disassembly

1. Remove vegetable hopper end weight assembly from vegetable hopper.
2. Loosen two knobs that secure vegetable hopper to food chute (Figure 6-1).
3. Remove vegetable hopper from food chute.

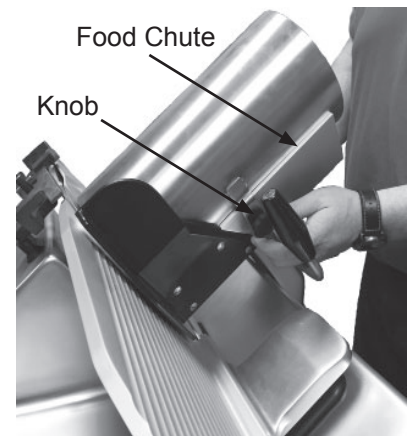


Figure 6-1.

4. Reinstall end weight. Align end weight with food chute and insert end weight slide rod through food chute and end weight (Figure 6-2).

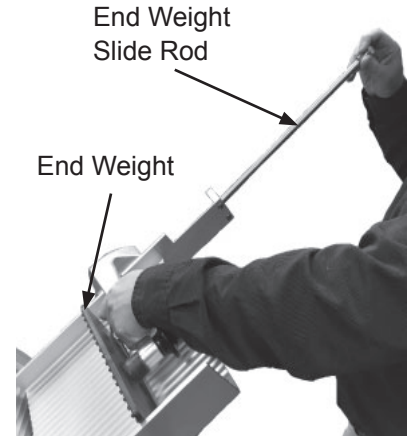


Figure 6-2.

5. Let end weight rest on food chute and securely screw in end weight slide rod to food chute (Figure 6-3).



Figure 6-3.