QUICK START GUIDE

CIBO+

1. WIPE OUT THE OVEN WITH A CLEAN CLOTH

2. ENSURE CIBO+ IS PLUGGED INTO A LIVE OUTLET

3. PRESS AND HOLD UNTIL BEEP



4. SELECT A PROGRAM

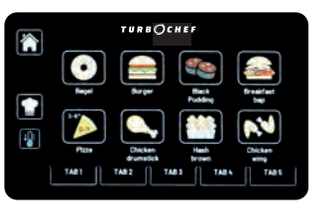

5. GETTING READY/ PRE HEATING



6. GREEN SCREEN WHEN READY

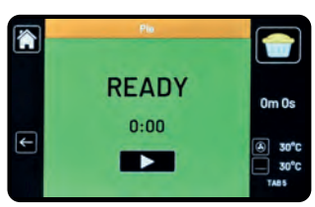

7. LOAD FOOD

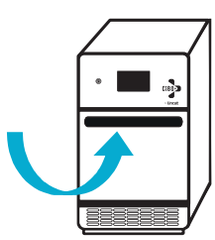

8. GREEN SCREEN WHILE COOKING



9. UNLOAD FOOD

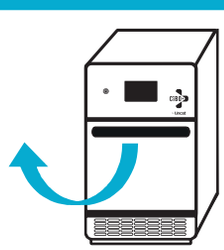

10. PRESS THE HOME ICON TO RETURN TO THE MENU



TURBOCHEF