



Food Prep Attachment



Model #: _____

Serial #: _____

**Instruction Manual for the
Food Prep Attachment
Models: S213, SG213, S213A & SG213A**

For all after sales support, visit www.globefoodequip.com

- **Complete the Warranty Registration**
- **Find an Authorized Servicer**
- **View Parts Catalogs**
- **Download an Electronic Copy of the Owner's Manual**

For additional Technical Support call Globe at 1-866-260-0522.

- IMPORTANT SAFETY NOTICE -

This manual contains important safety instructions which must be strictly followed when using this equipment.

Maintain and use this manual as a reference for training.

Index

INSTALLATION	5
OPERATION.....	7
DISASSEMBLY	8



GLOBE FOOD EQUIPMENT CO.
2153 DRYDEN RD.
DAYTON, OH 45439
Toll Free: 800-347-5423
PHONE: 937-299-5493
EMAIL: info@globefoodequip.com
WEBSITE: www.globefoodequip.com

Installation

Remove the Carriage Tray

1. Push STOP button to turn off knife motor.
2. Turn slice thickness dial clockwise past zero (0) until it stops so gauge plate covers knife edge.
3. Unplug power cord.
Note: When slicer is unplugged the white POWER indicator light will go out.
4. Pull carriage toward you (home position).
5. Push in and turn the interlock knob clockwise (1/4 turn) (Models SG213 & SG213A) to lock the carriage arm (Figure 4-1).
6. Unlock the carriage lock lever that fastens the carriage to the carriage arm (Figure 4-1).
7. Remove the carriage tray from carriage arm (Figure 4-3).



Figure 4-1.

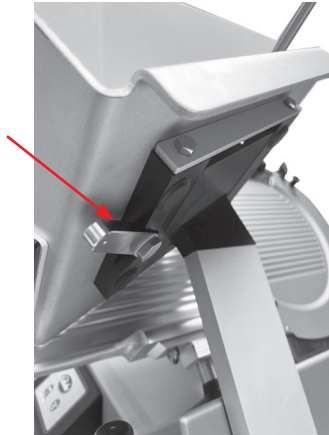


Figure 4-2.

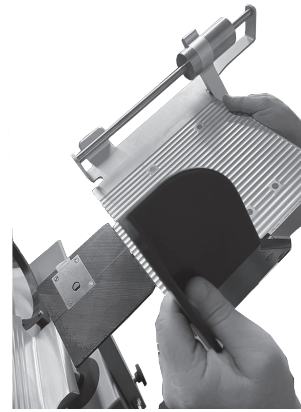


Figure 4-3.

Install the Food Prep Attachment

1. Install the food prep attachment on the carriage arm.
Note: To make sure the gap between the food prep attachment and the knife does not move during operation, adjust the adjustment screw.
2. Turn the adjustment screw clockwise to set the adjustment of the food prep attachment to 0.06-1.0 in. gap from the knife face (Figure 4-4).
3. Tighten the adjustment screw nut counterclockwise to secure the distance between the food prep attachment and the knife blade.
4. Lock the carriage lock lever to secure food prep attachment to the carriage arm (Figure 4-5).
5. Push in and turn the interlock knob counterclockwise (1/4 turn) (Models SG213 & SG213A) to unlock the carriage arm (Figure 5-6).

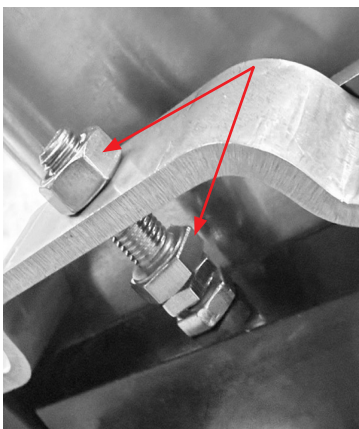


Figure 4-4.

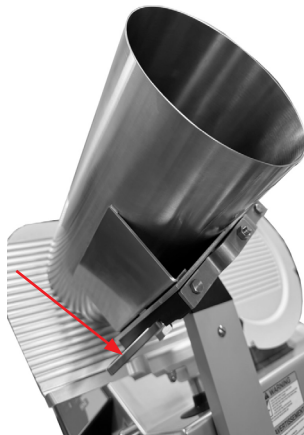


Figure 4-5



Figure 4-6.

Operation

⚠ WARNING



SHARP KNIFE BLADE

TO AVOID SERIOUS PERSONAL INJURY:

- **NEVER** touch rotating knife.
- **ALWAYS** keep hands clear of all moving parts.
- **NEVER** put hands/fingers into food prep attachment during operation. **ONLY USE FOOD PREP ATTACHMENT END WEIGHT ASSEMBLY** to push vegetables into food prep attachment.

1. Put vegetables in food prep attachment.
2. Put food prep attachment end weight assembly in food prep attachment (Figure 5-1).
3. Push START button to turn on knife motor.

Note: The green RUN indicator light will illuminate.



DO NOT hold the food product with your hand. Never put your hand on or around carriage when slicer is under power. The carriage handle is the only part of the slicer you should touch while slicing.

4. Use carriage handle to manually push carriage back and forth. The carriage handle is the only part of slicer you should touch while slicing. Do not catch slices with your hand. Let slices drop onto receiving area (Figure 5-2).



If a product needs to be adjusted during slicing, ALWAYS pull the food prep attachment all the way towards you. Turn off slicer, and close slicer table prior to adjusting the product and the end weight.

5. After the last slice stroke, pull carriage all the way towards you. Push the STOP button to turn knife motor OFF.

Note: The green RUN indicator light will go out.

6. Turn slice thickness dial clockwise until it stops to close slicer table. Now you can unload and load food product from carriage.



Figure 5-1.



Figure 5-2.

Disassembly

Remove the Food Prep Attachment

1. Push in and turn the interlock knob clockwise (1/4 turn) (Models SG213 & SG213A) to lock the carriage arm (Figure 8-1).
2. Unlock the carriage lock lever to unlock the food prep attachment from the carriage arm (Figure 8-2).
3. Remove the food prep attachment from the carriage arm.



Figure 8-1.

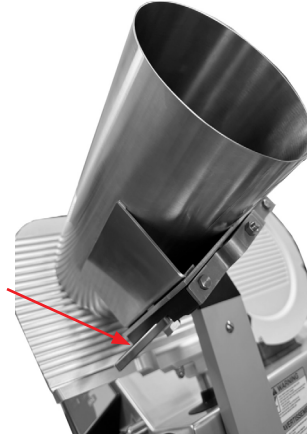


Figure 8-2.

Reinstall the Carriage Tray

1. Reinstall the carriage on the carriage arm (Figure 8-3).
2. Lock the carriage lock lever that fastens the carriage to the carriage arm (Figure 8-4).
3. Push in and turn the interlock knob counterclockwise (1/4 turn) (Models SG213 & SG213A) to unlock the carriage arm (Figure 8-5).

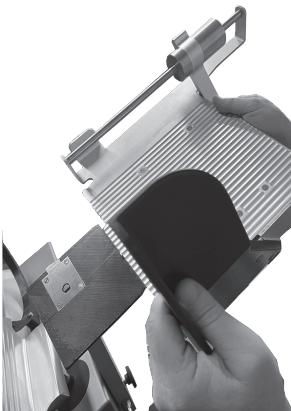


Figure 8-3.

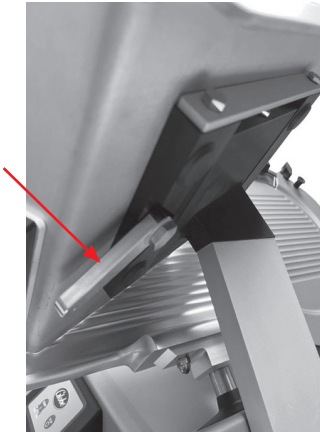


Figure 8-4.



Figure 8-5.