




Converting the IDS-350 Stand

Step 1: Using the stand with an ID-0160-AN



No conversion necessary.

Place the legs in the holes positioned on the top and make your plumbing & electrical connections.

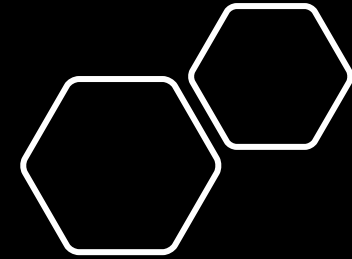


**Conversion Steps
ID-0160-AN**

Step 2: Using the stand with an ID-0300-AN



Remove the top panel with the 4 leg inserts and set it aside.

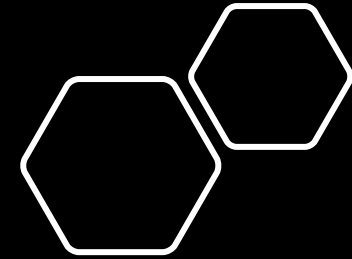


Conversion Steps
ID-0300-AN

Step 3: Using the stand with an ID-0300-AN



Remove the 8 screws securing the leg trays and set the trays and screws aside.

You will use these parts in the final step.

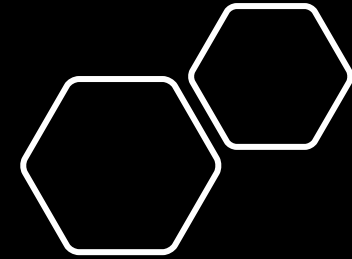


Conversion Steps
ID-0300-AN

Step 4: Using the stand with an ID-0300-AN




Remove the 4 screws securing the lower riser and remove the riser.

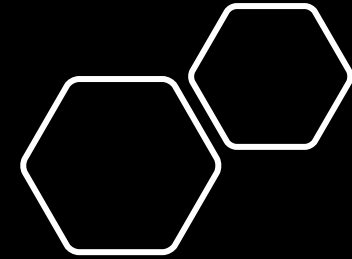


Conversion Steps
ID-0300-AN

Step 5: Using the stand with an ID-0300-AN

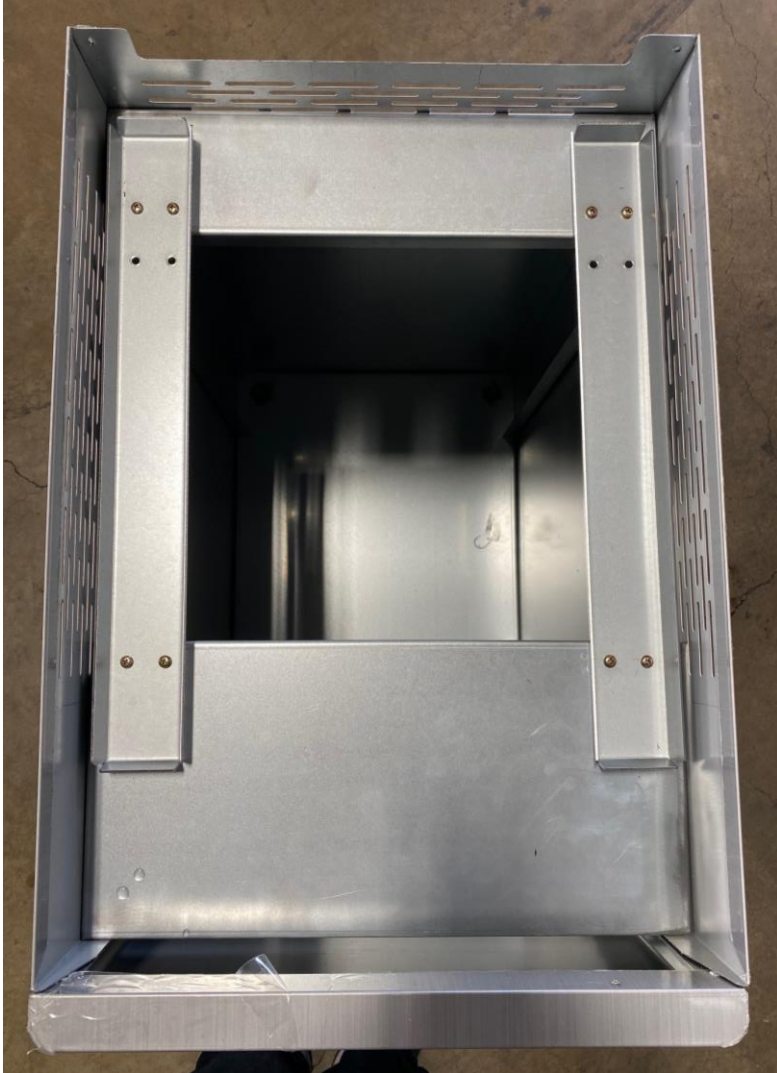

With the riser removed, place the leg trays back into the stand and secure them with the 4 screws previously removed.

Set the ID-0300-AN inside the stand, making sure the legs sit within the leg trays.

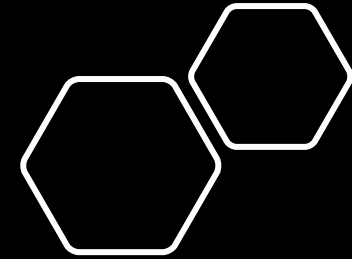

**Conversion Steps
ID-0300-AN**

Thank You

